



HIKVISION
First Choice for Security Professionals

Video Intercom System Introduction

- 
- A decorative geometric shape, resembling a stylized star or a cluster of overlapping triangles, is located on the left side of the page. It is light gray and semi-transparent.
- **Application**
 - **Products**
 - **Installation**
 - **Operation**



Video Intercom System

**Service for residential area,
Provide two-way video/audio call between
visitors and residents,
Achieve image and voice recognition,
Increase the safety and reliability**

Video Intercom System – Community

HIKVISION




First Choice for Security Professionals

Video Intercom System – Villa

HIKVISION



First Choice for Security Professionals

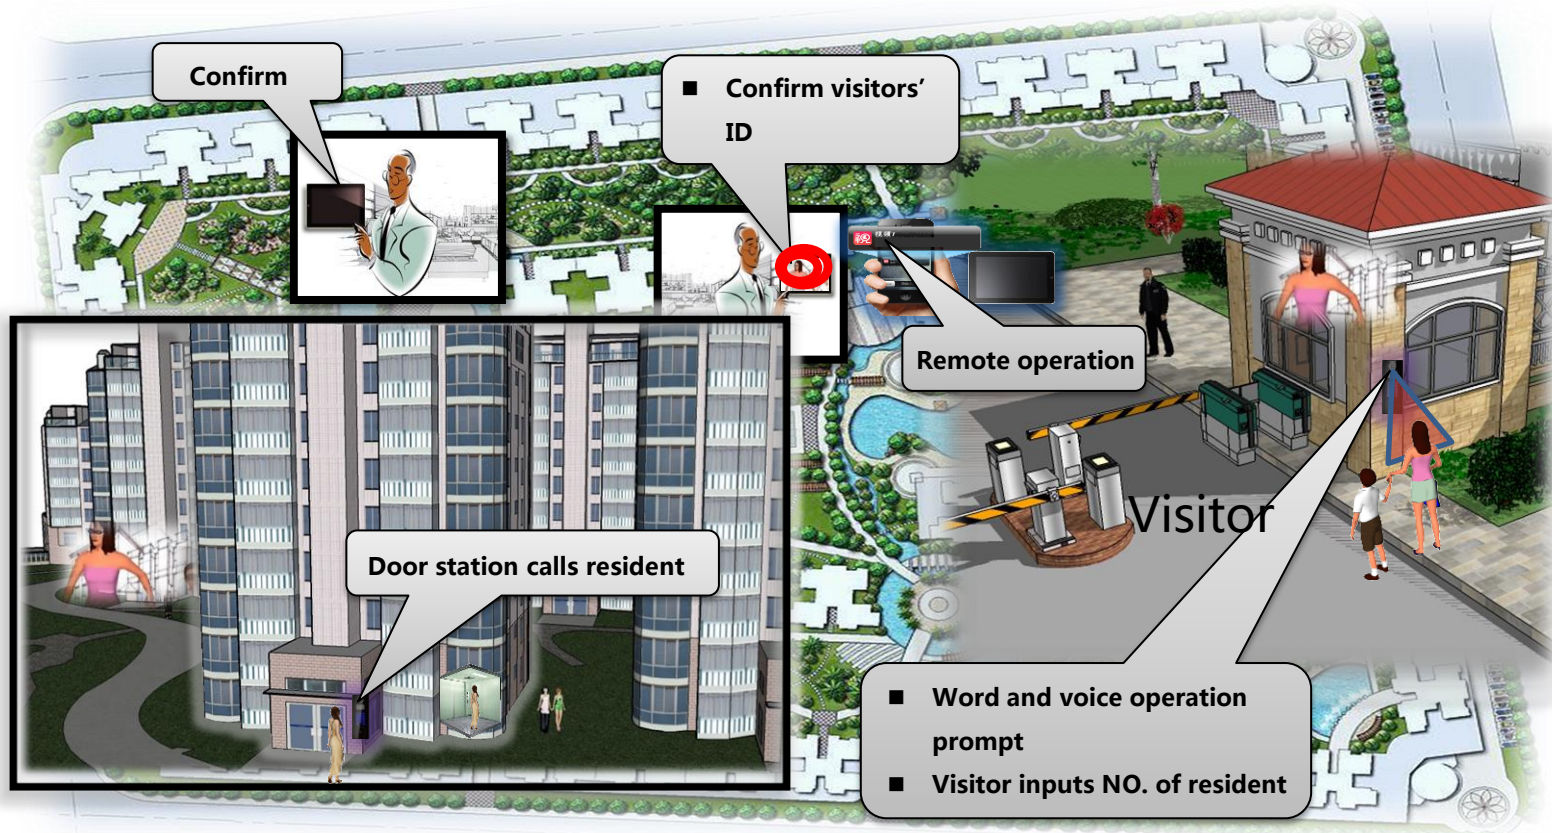

Fundamental – Video/Audio Call

HIKVISION



NOTE:

- Live View & Locks signaling
- Calling signaling

First Choice for Security Professionals

- Application
- **Products**
- Installation
- Operation

Products

HIKVISION




Professional-Level

Entry-Level

First Choice for Security Professionals

Products – Structure


HIKVISION

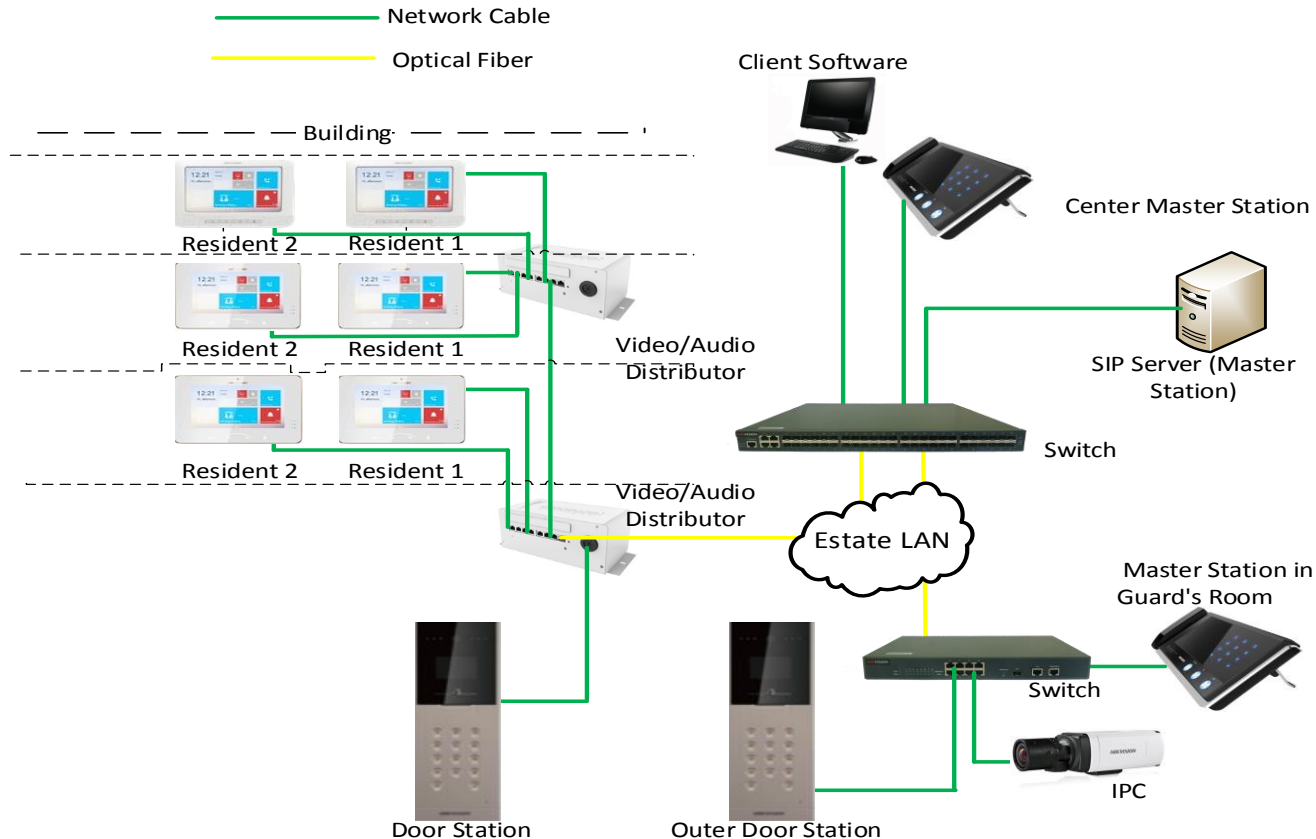

First Choice for Security Professionals

Products – Naming Rule

HIKVISION

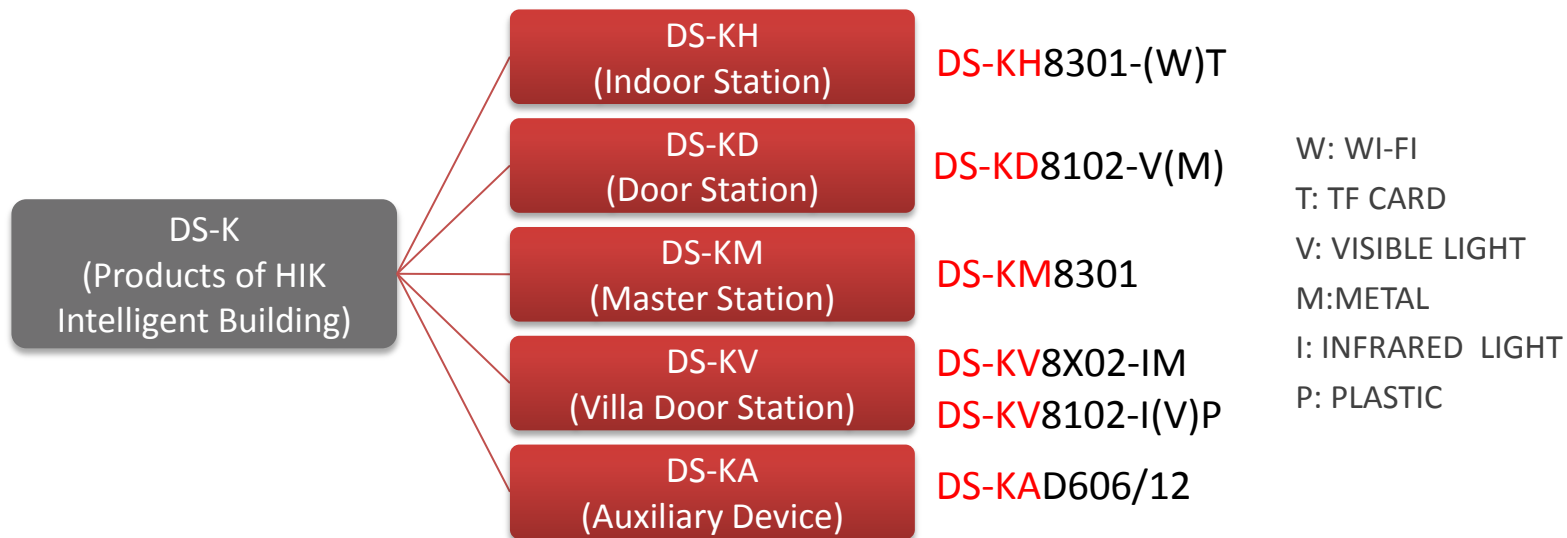

Products – Indoor Station

HIKVISION



1024*600

7-Inch LCD

**0.3 MP
CMOS**

8 Zones

**32G TF
Card**

**Switch for
Privacy
Protection**

First Choice for Security Professionals

Products – Indoor Station

HIKVISION

Video Intercom	
16 Channels	Extension
Leave Audio Message	Hik SIP Hik PoE



First Choice for Security Professionals



DS-KH8301-(W)T

**1024*600
7-Inch LCD**

**0.3 MP
CMOS**

**Touch
Button**

**32G TF
Card**

**2* RS485
Port**



8 series indoor station

TF Card 32G:

- Leave message information
- Notice picture
- Capture picture

Products -- Door Station

HIKVISION

1.3 MP CMOS
120° WDR

Intelligent Light
Supplement

Capture Picture
when Unlocking

Issuing Card
Locally

Noise Suppression &
Echo Cancellation

IP 65

Tamper-Proof

Blue Light
Touch Key

Card Swiping Area
PIR

Card Swiping
Area

Mechanical
Button

120°

Plastic Panel

Metal Panel

DS-KD8102-V

DS-KD8002-VM



DS-KV8202-IM DS-KV8402-IM

Villa Door Station

Double-button for town house

Four-button for one building with four residents or multi-tenant

NOTE: Villa door station can also works as sub villa door station, when installed on other entrance of house.



DS-KV8102-IM DS-KV8102-IP DS-KV8102-VP

Single-button villa door station

Two ways of use:

- When installed outside of house
--> **villa door station**: call residents
- When installed outside of apartment
--> **doorphone**: confirm identification again

Products -- Door Station

HIKVISION



Apartme nt	3.5' LCD 480*320	Visible Light	Issue 2500 Card	8 Sub- stations	NO POE
---------------	---------------------	------------------	-----------------------	--------------------	--------



House/ Multi- tenant	NO LCD	Visible Light	Issue 256 Card	6 Sub- stations	HIK POE
----------------------------	--------	------------------	----------------------	--------------------	---------



House	NO LCD	Visible/ Infrared	Issue 256 Card	6 Sub- stations	HIK POE
-------	--------	----------------------	----------------------	--------------------	---------

Built –in Mifare 1 Reader
External Card Reader
Lock Control
Door Magnetic Detection

Products -- Master Station

HIKVISION



**1024*600
7-Inch LCD**

**Video
Intercom**

**SIP Function, Support
1500 Apartments**


Remote Unlocking Door

**Alarm Processing
Function**

**External Handset
Touch Screen & Key**

Products -- Master Station(SIP Server)

HIKVISION

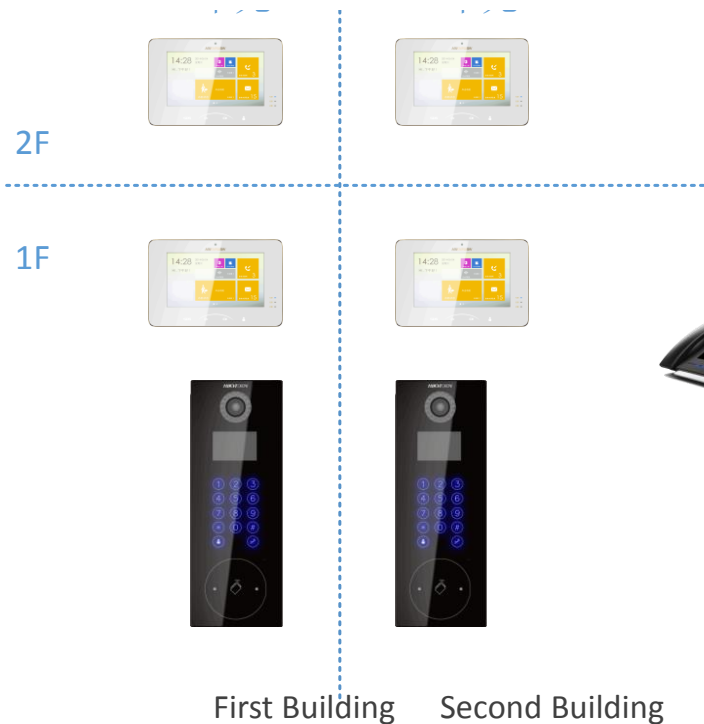

Video intercom between two stations

- When 2 indoor stations in one building ,
--> **door station transmitting**
- When 2 indoor stations in different buildings ,
--> **SIP Server transmitting**
- When video intercom between door station and master station
--> **SIP Server transmitting**
- When video intercom between indoor station and master station
--> **SIP Server transmitting**






DS-KAD606/612

Video/Audio Distributor

Power supply for **indoor station** and **villa door station** over network cable, also named HIK POE, not standard

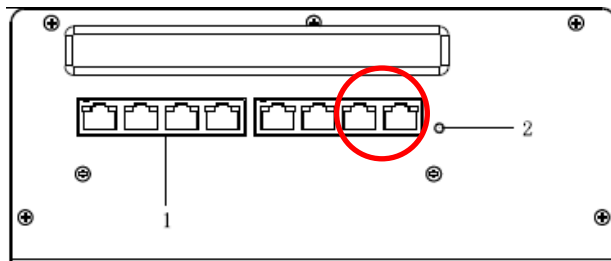

DS-KAD606


LAN * 2 : cascading LAN interface,
Cascading amount up to 4

POE * 6 : Power supply for indoor
station and villa door station

DS-KAD612

LAN * 4: cascading LAN interface,
Cascading amount up to 8

POE * 12 : Power supply for indoor
station and villa door station

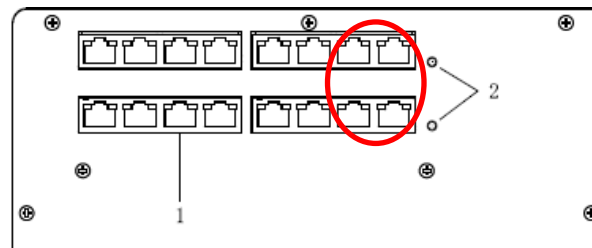




DS-KAW50-1

Power supply for door station

Input Voltage: 100 -- 240 V


Output Voltage: 12V

Output Power: 50W

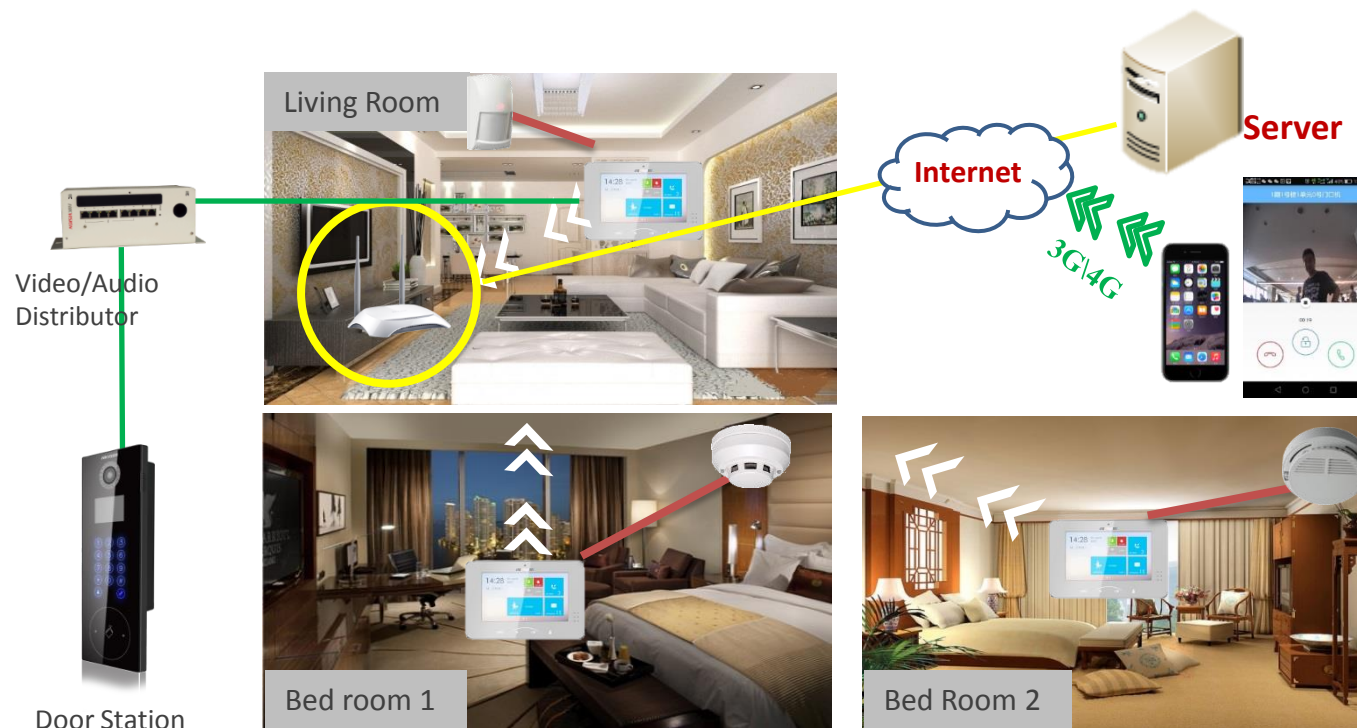

New Products – Structure

HIKVISION

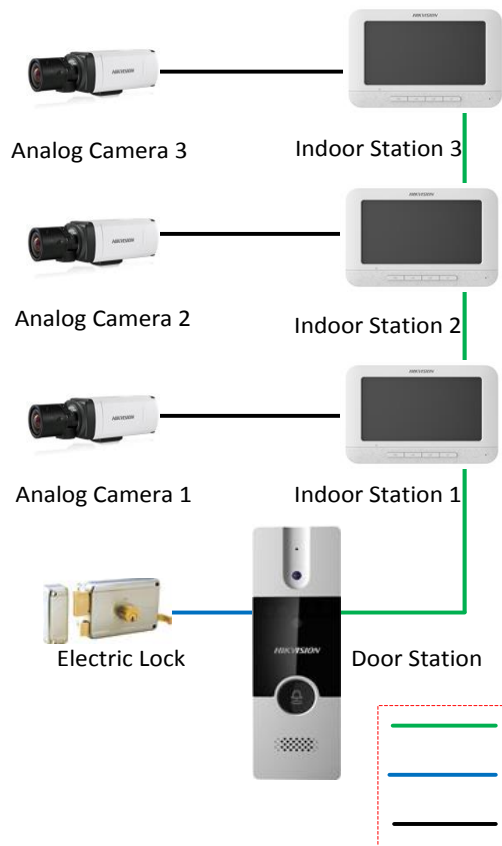

Package:

Indoor station: **DS-KH2200**

Door Station: **DS-KB2411-IM**

Analog Camera: **DS-2CE16A2P-IT3**

NOTE: DS-KB2411-IM, B means bell



DS-KH2200

- 7-Inch Colorful TFT LCD
- Physical Button
- Remote unlocking
- Up to three indoor station cascading
- Monitoring door station and analog camera



DS-KB2411-IM

- Pinhole camera with 720 x 576 @ 25 fps
- Photosensitive IR Supplement (2m)
- Unlocking control
- Up to two door station cascading
- Anti-oxidant aluminium alloy

- Application
- Products
- **INSTALLATION**
- Operation


Door Station -- Installation

HIKVISION



Door Station

Dimensions: more than 405*124*66(mm)

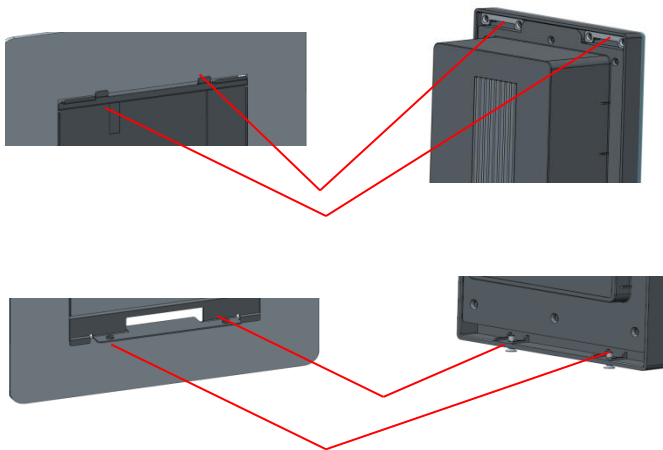


First Choice for Security Professionals

Door Station -- Installation

HIKVISION

Door Station: DS-KD8102-V

Hole Dimensions: 123 (Wide) * 404(Length) *47.5(Depth) mm

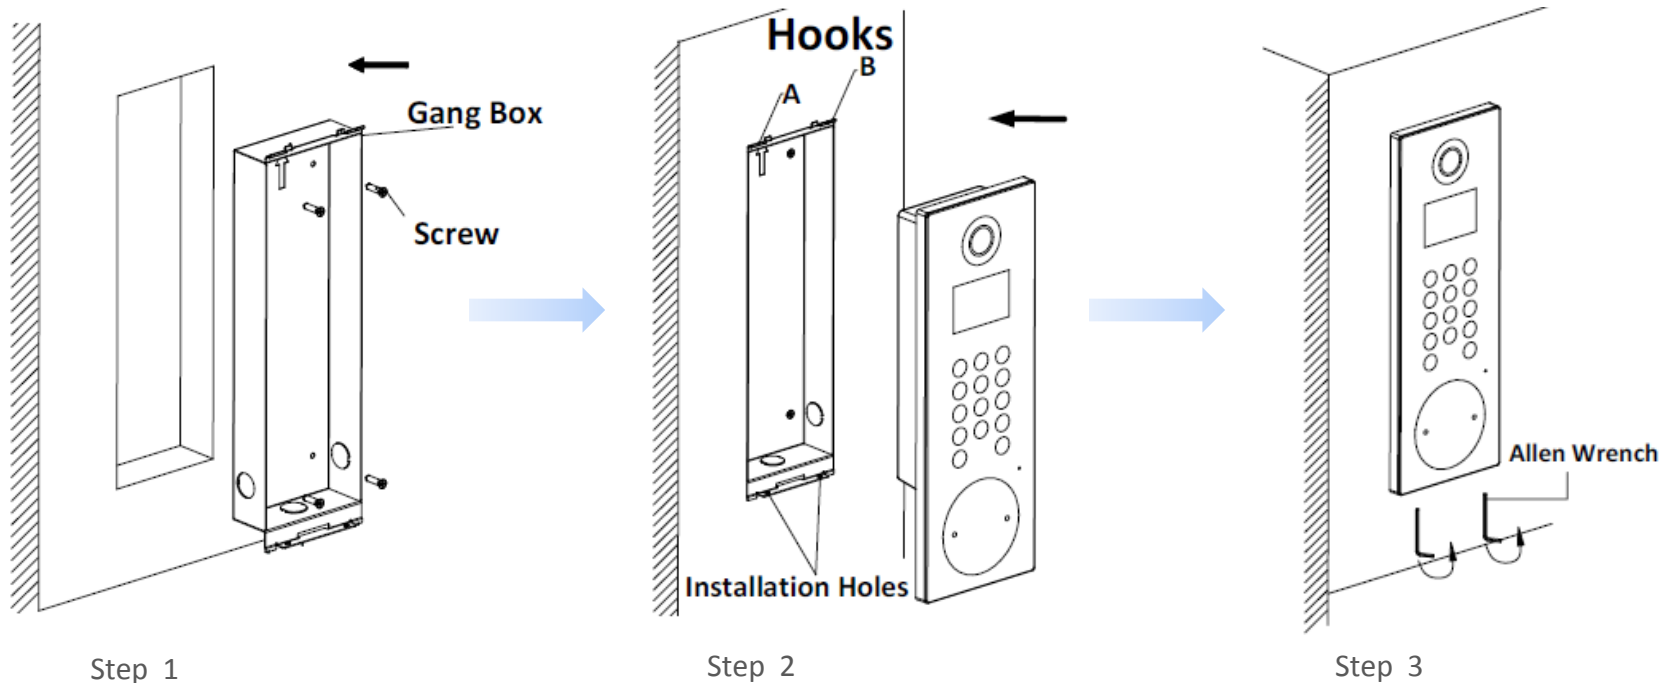


Door Station -- Installation


HIKVISION

Door Station: DS-KD8002-VM

Hole Dimensions: 135.5 (Wide) * 408 (Length) * 55 (Depth) mm

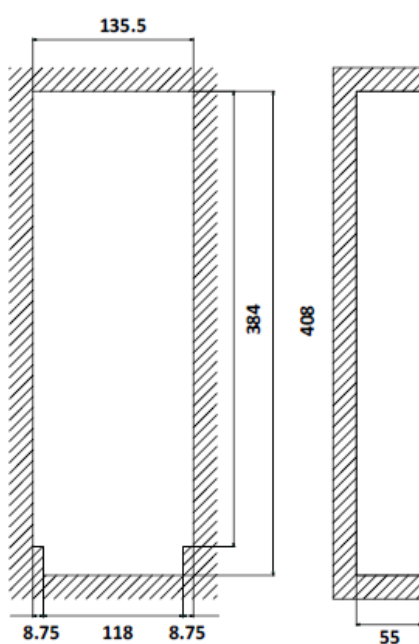

Step 1

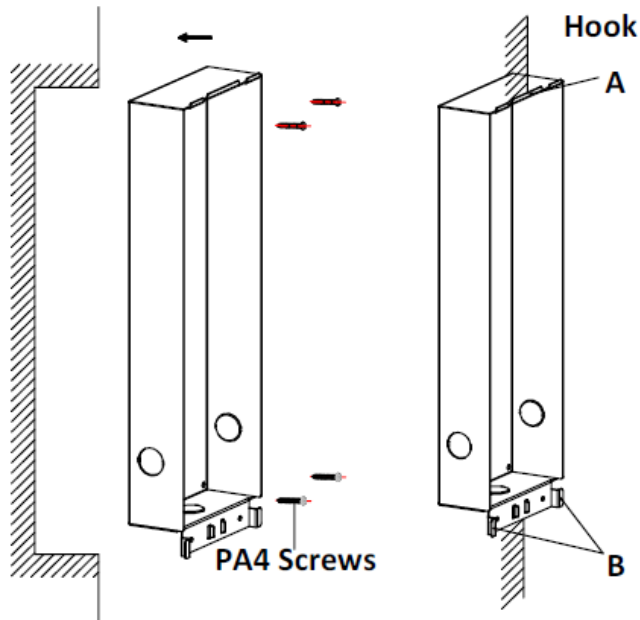


Step 2

Door Station -- Installation


HIKVISION

Door Station: DS-KD8002-VM

Hole Dimensions: 135.5 (Wide) * 408 (Length) * 55 (Depth) mm

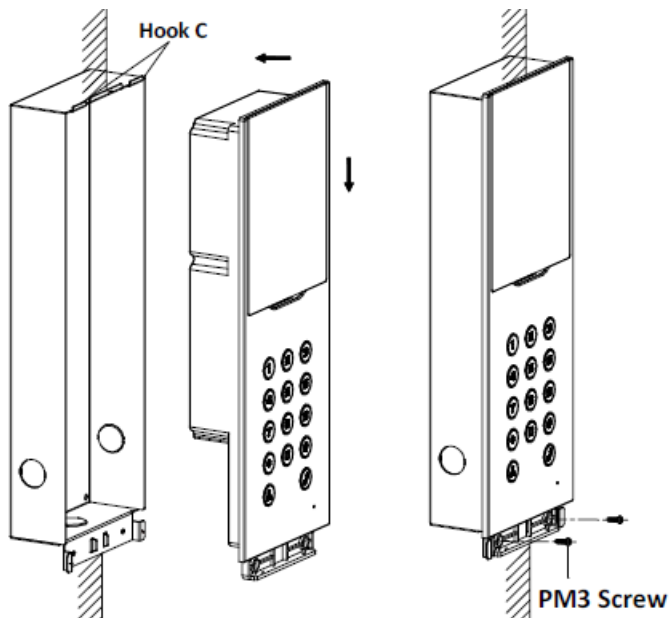


Step 3

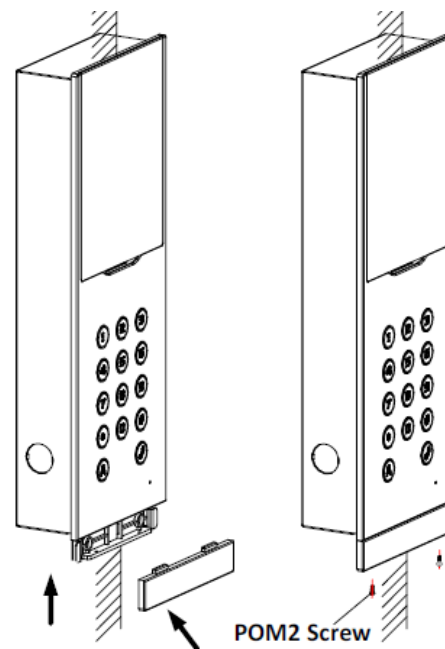

Step 4

Door Station – Terminals and Interfaces

HIKVISION

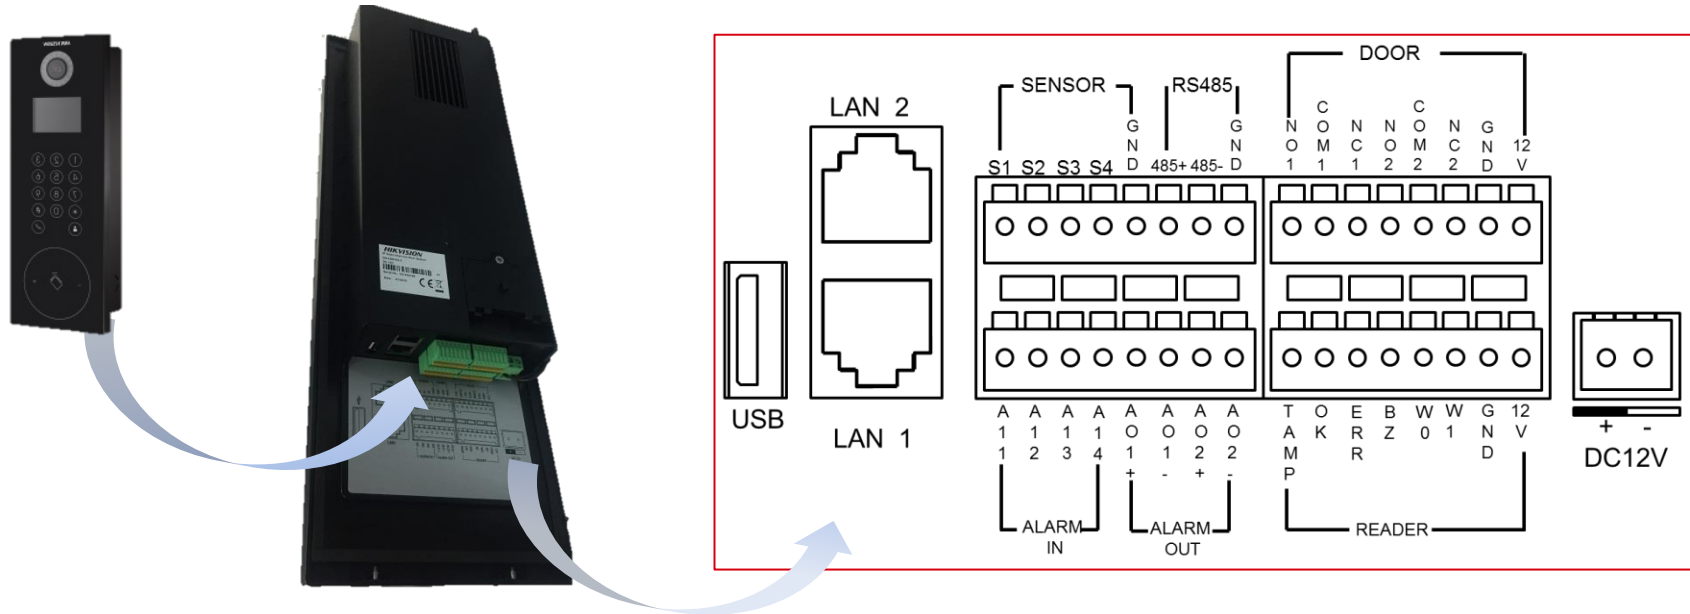

NOTE: LAN 2 and RS485 interfaces are reserved.

Door Station – Lock Wiring


HIKVISION



Magnetic Lock

NC

Power on, lock;
Power off, unlock;

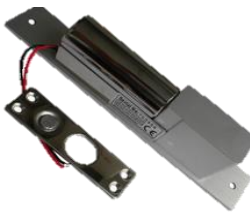


Electric Bolt



NC


Power on, lock;
Power off, unlock;

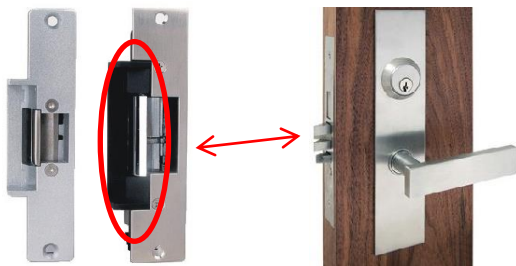

Electric Strike

NO


Power on, unlock;
Power off, lock;

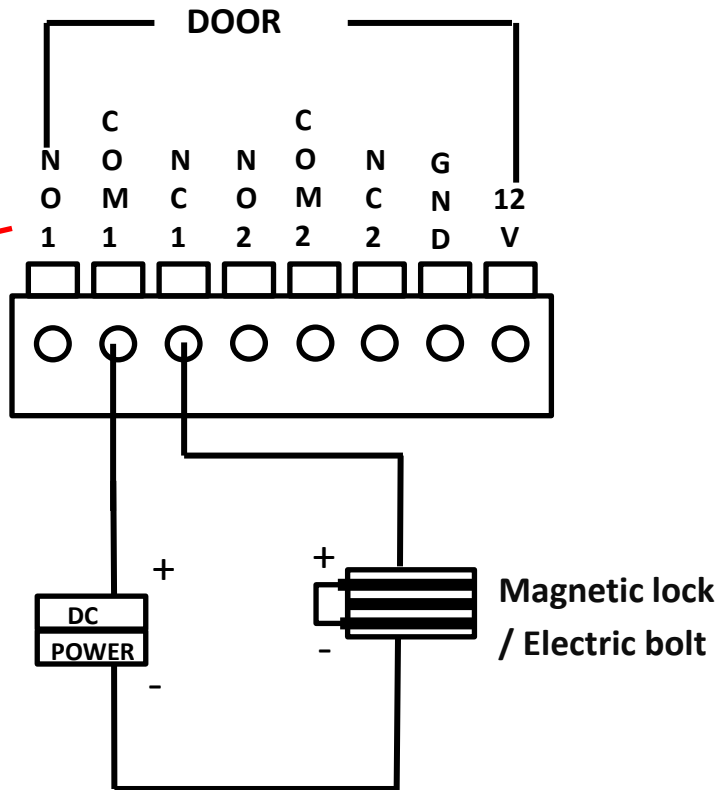HIKVISION


NOTE: One door station can only connect one lock; Terminal NC1/COM1 is set as default for accessing magnetic lock/electric bolt;

Door Station – Electric Strike Wiring

Connect electric strike to door station, and power supply independently


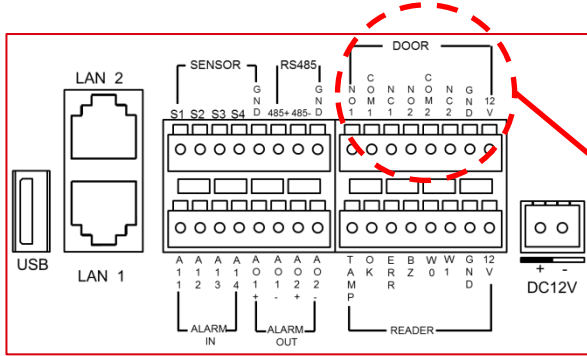


NOTE: One door station can only connect one lock; Terminal NO1/COM1 is set as default for accessing electric strike.

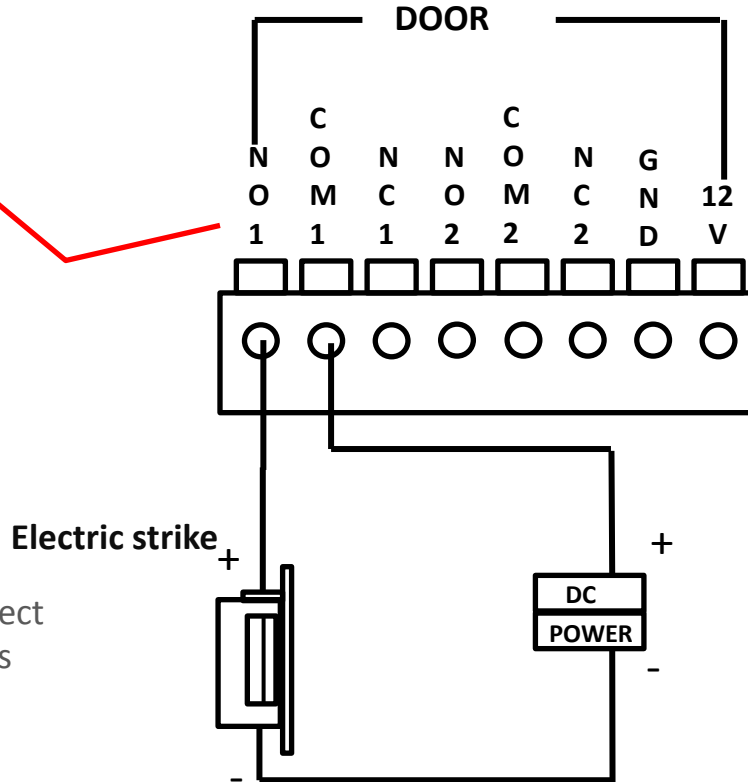


Door Station – Hik Magnetic Lock/ Electric Bolt Wiring

Connect magnetic lock/ electric bolt to door station, and power supply by door station

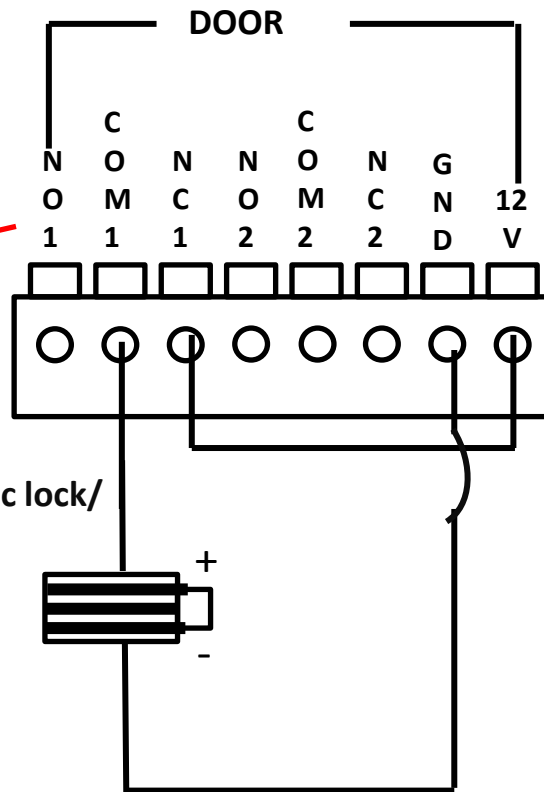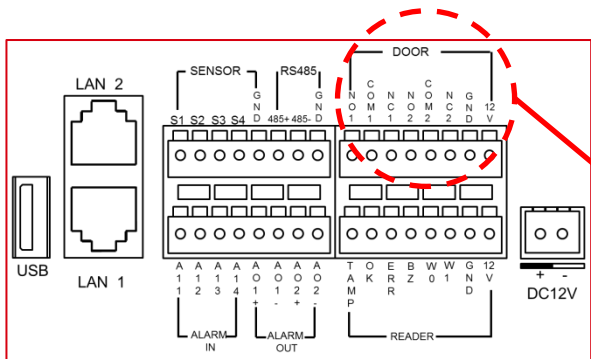

HIK Magnetic lock/
Electric bolt



NOTE: One door station can only connect one lock; Terminal NC1/COM1 is set as default for accessing magnetic lock/electric bolt;

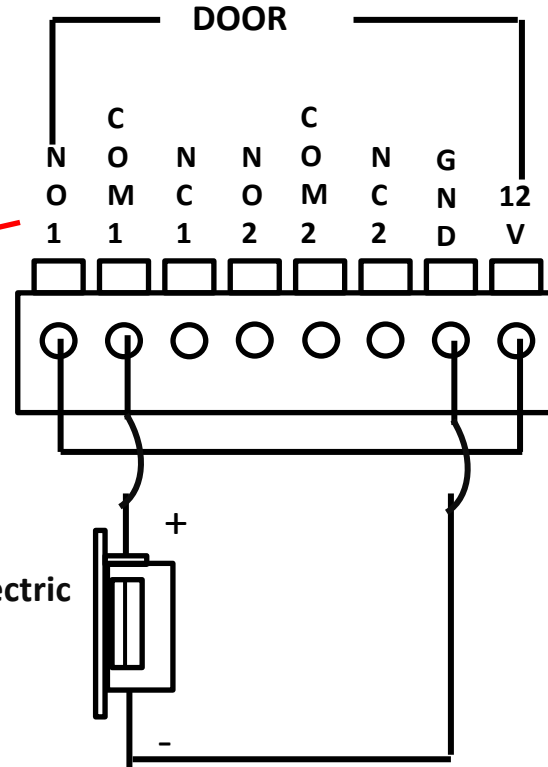HIKVISION

NOTE: One door station can only connect one lock; Terminal NO1/COM1 is set as default for accessing electric strike.

Door Station – Card Reader Wiring



Connect card reader to door station for going out, in this case, it supports swiping card to open the door.

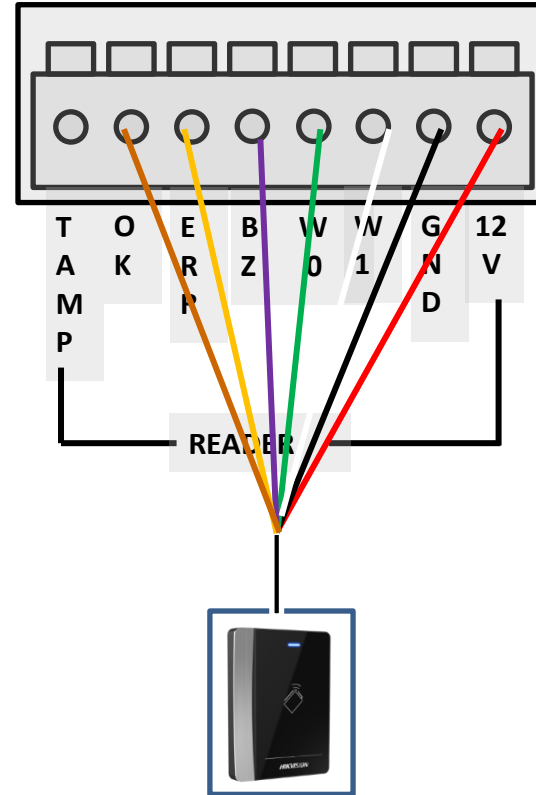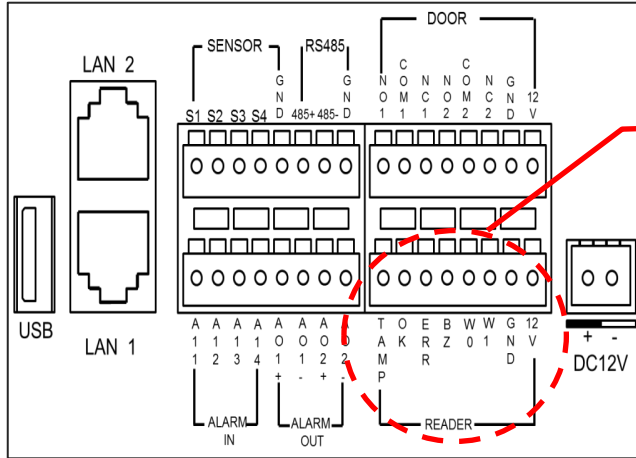

NOTE: Different colors for different ports

Door Station – Exit Button Wiring

Connect exit button to door station for going out, in this case, it supports press button to open the door.

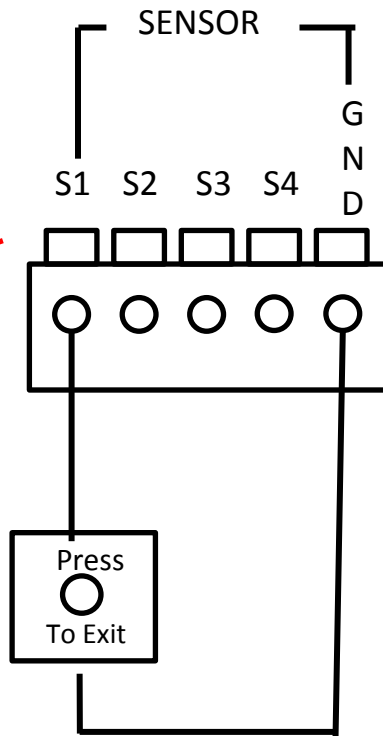
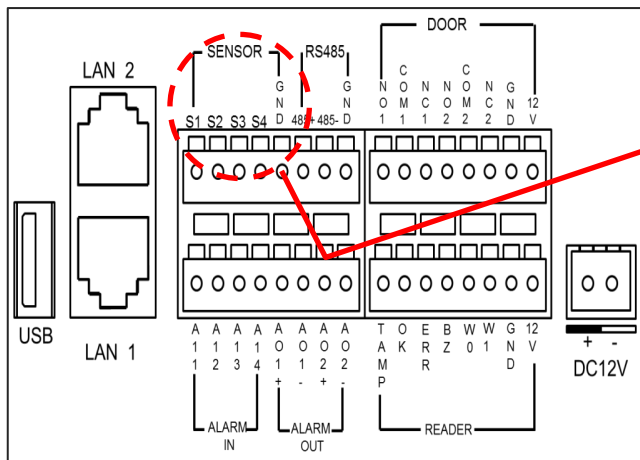


NOTE: Terminal S1 is set as default for connecting door switch button, it is required setting the output of terminal S1 to be door status with video intercom configuring tool software.


Door Station – Door Magnetic Wiring

HIKVISION

Connect door magnetic to door station for feedback door status

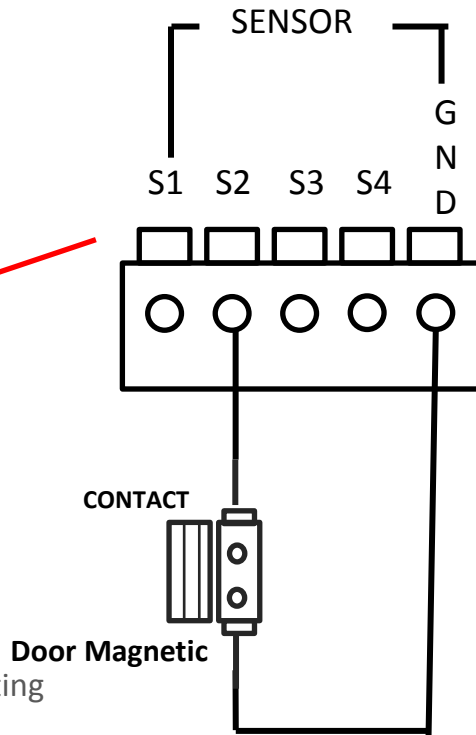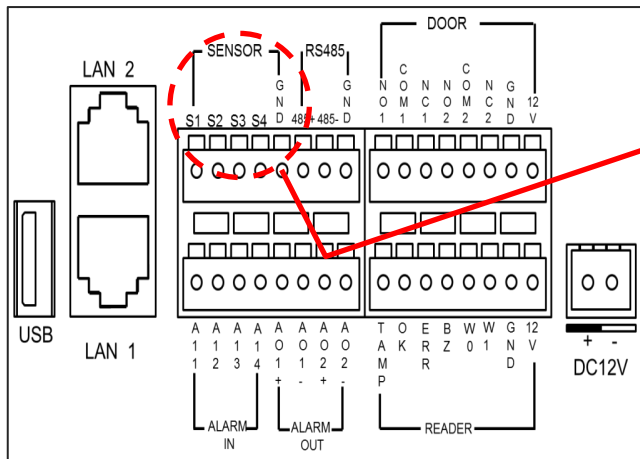

NOTE: Terminal S2 is set as default for connecting magnetic door.

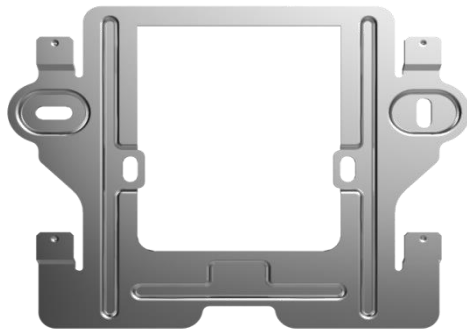

Installation Plate




Indoor Station -- Installation


HIKVISION

Indoor Station


Wall-mounting with gang box

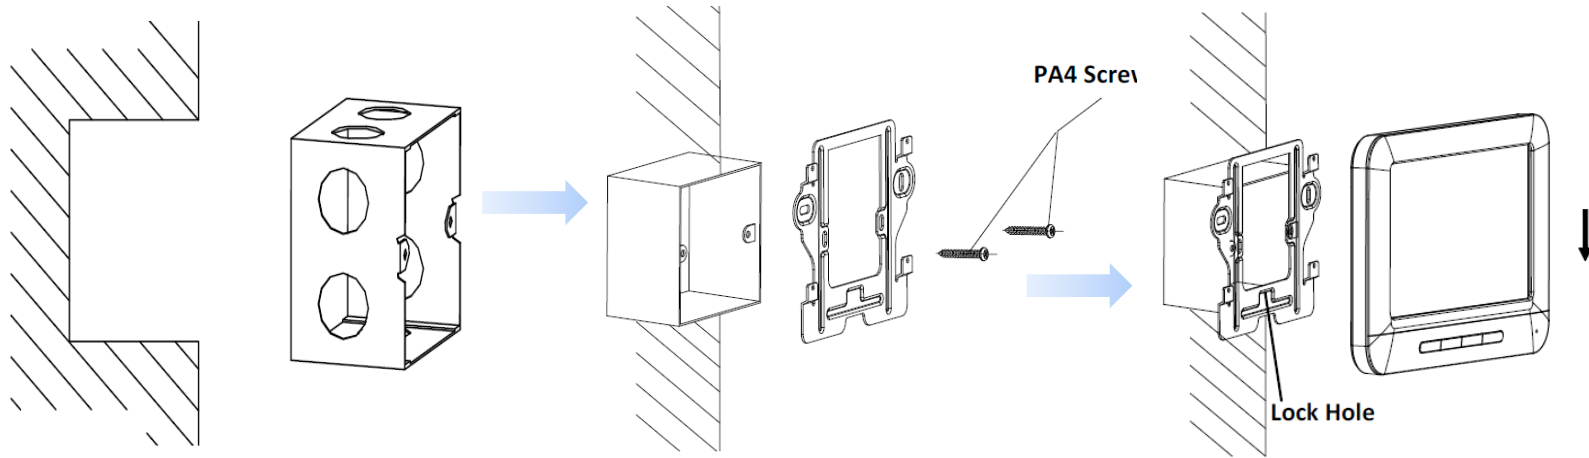

NOTE: chisel a hole in the wall for inserting the gang box, the size of the hole should be 76 (Width) * 76(Length) * 50 (Depth)

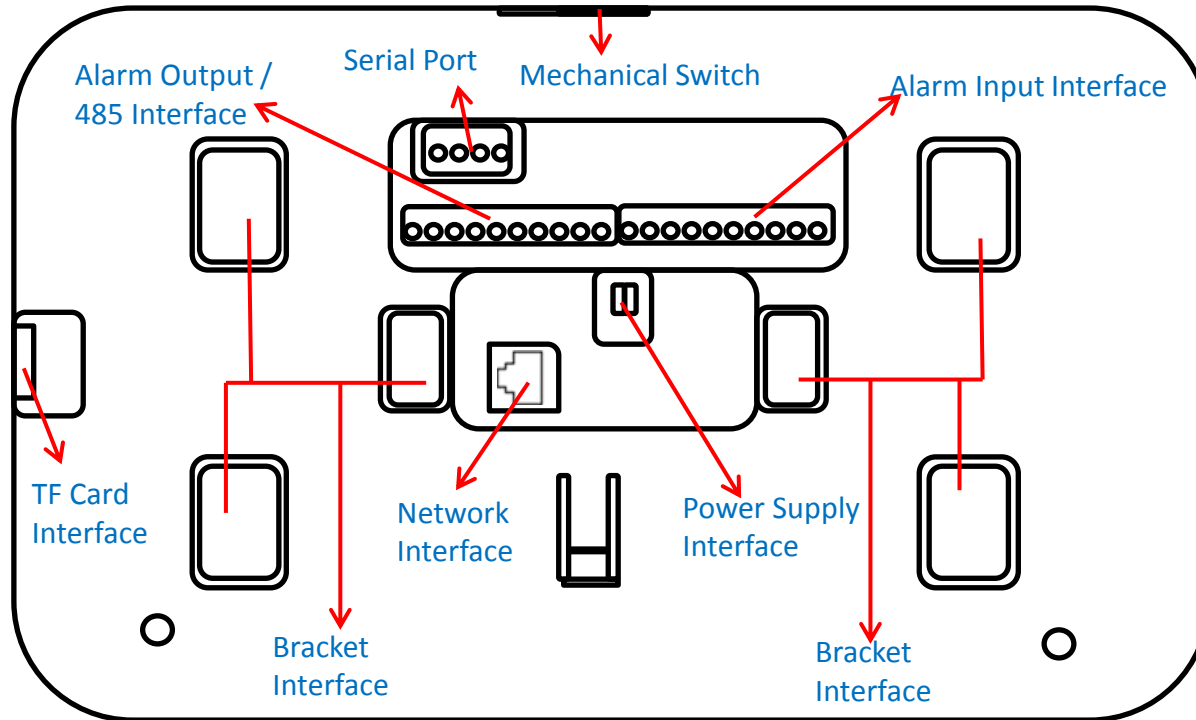


Door Station – Detector Wiring

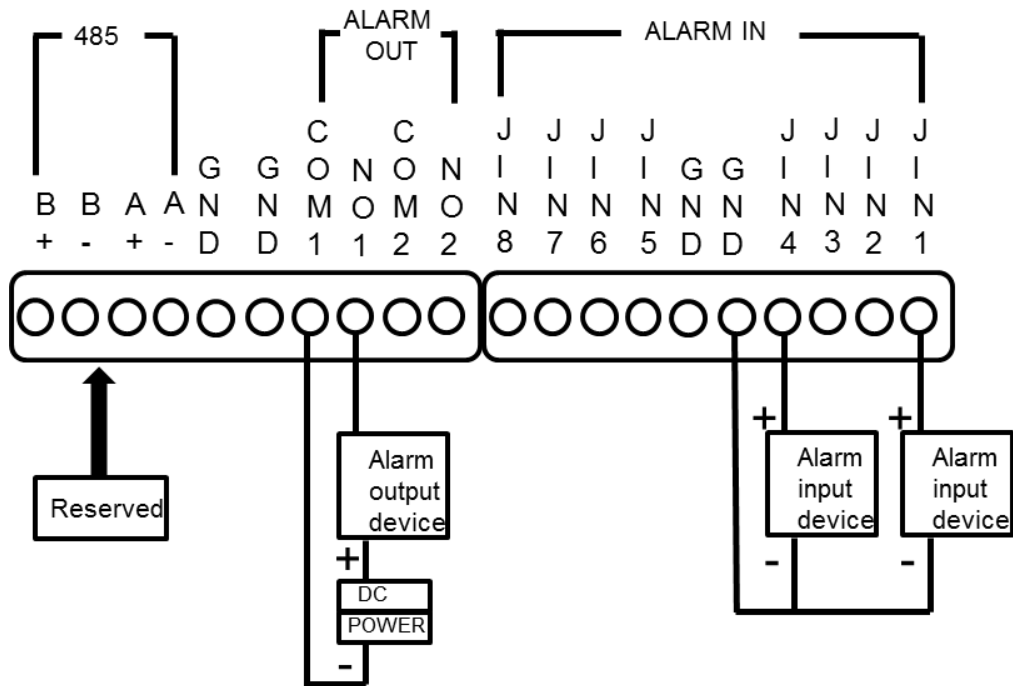

Villa Door Station -- Installation

HIKVISION

Wall-mounting with Gang Box of DS-KV8X02-IM

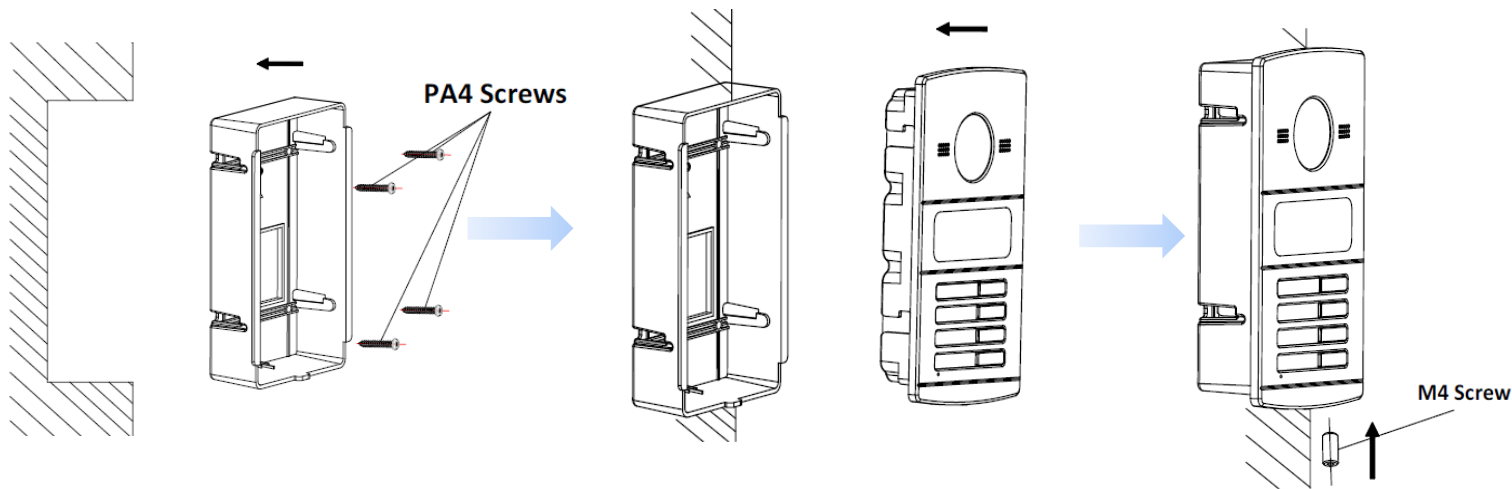


NOTE: the gang box in the packing box, chisel a hole in the wall for inserting the gang box, the size of the hole should be 90(Width) * 170 (Length) * 38 (Depth)

Villa Door Station -- Installation

HIKVISION

Wall-mounting with Gang Box of DS-KV8102-XP

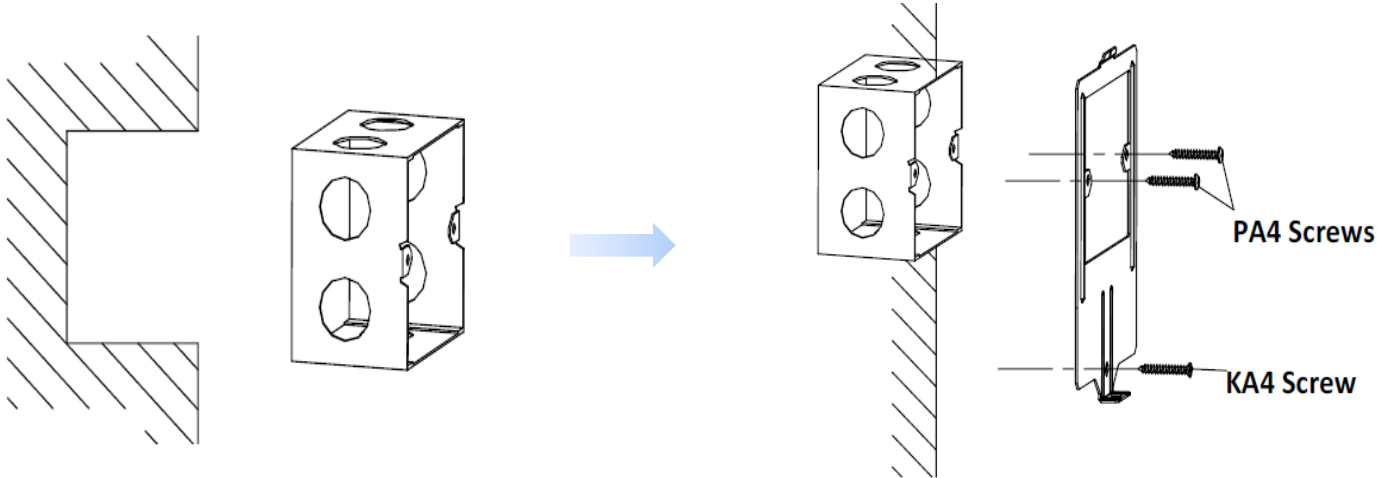


NOTE: chisel a hole in the wall for inserting the gang box, the size of the hole should be 76(Width) * 76 (Length) * 50 (Depth)

Villa Door Station -- Installation

HIKVISION

Wall-mounting with Gang Box of DS-KV8102-XP

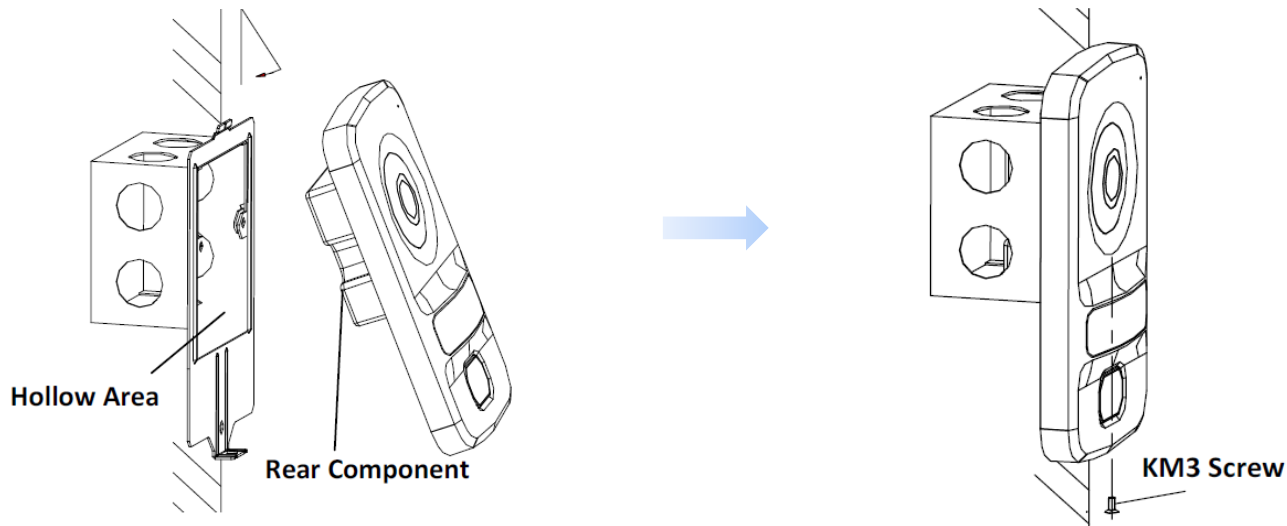


Video/Audio Distributor – installation & wiring

HIKVISION




Fix it on the wall with screws

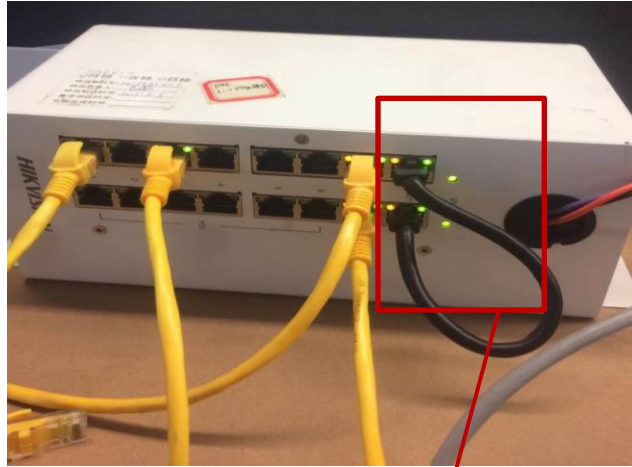


Conenct rightmost 2 LAN
ports directly via network
cable

Indoor station: Wall-mounting with junction Box

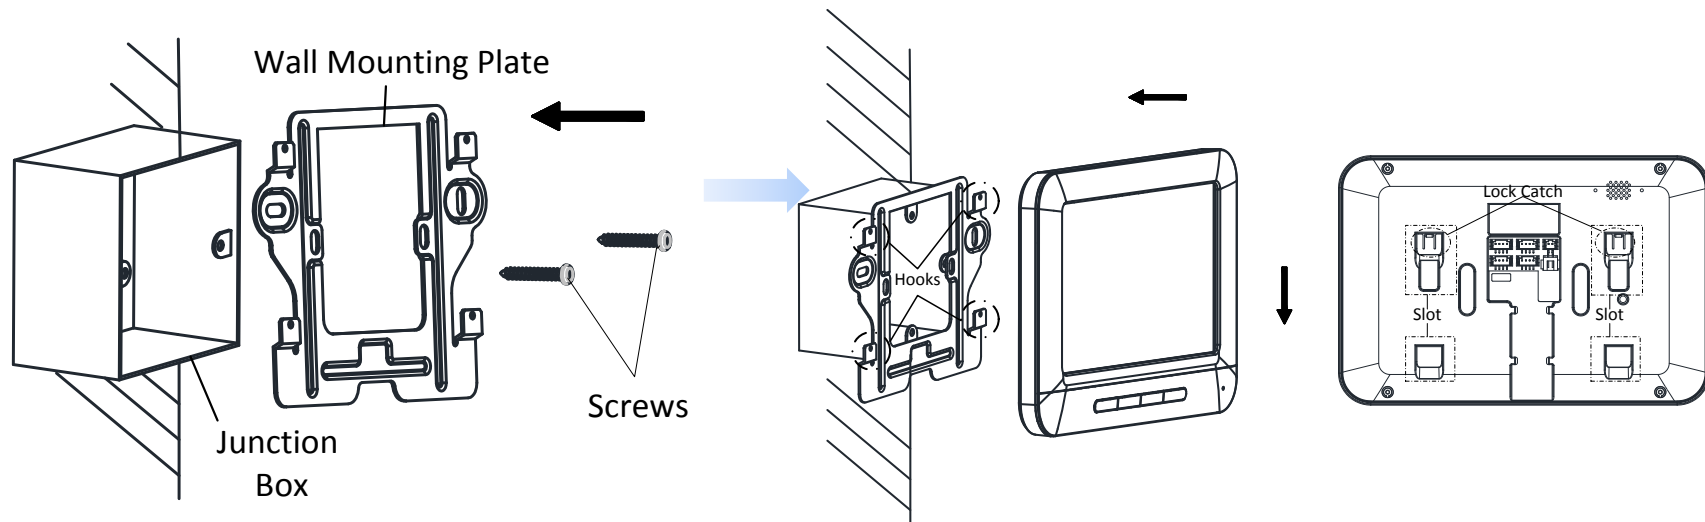

NOTE: the junction box should be 75(Width) * 765(Length) * 50 (Depth);
Installed without junction box, fix the wall mounting plate to the wall
with 2 expansion screws.

Door station: Wall-mounting Shield

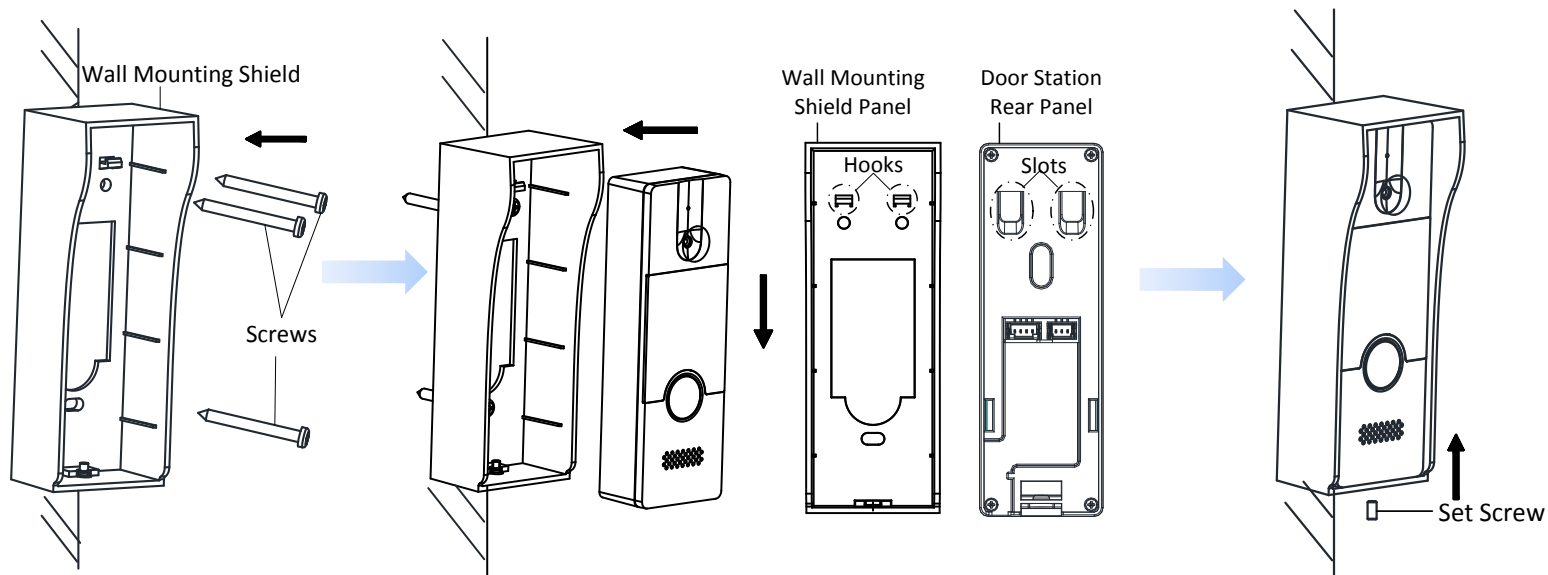


NOTE: wall-mounting shield is included in the bom package.

New Products -- Interface

Indoor station interface


HIKVISION

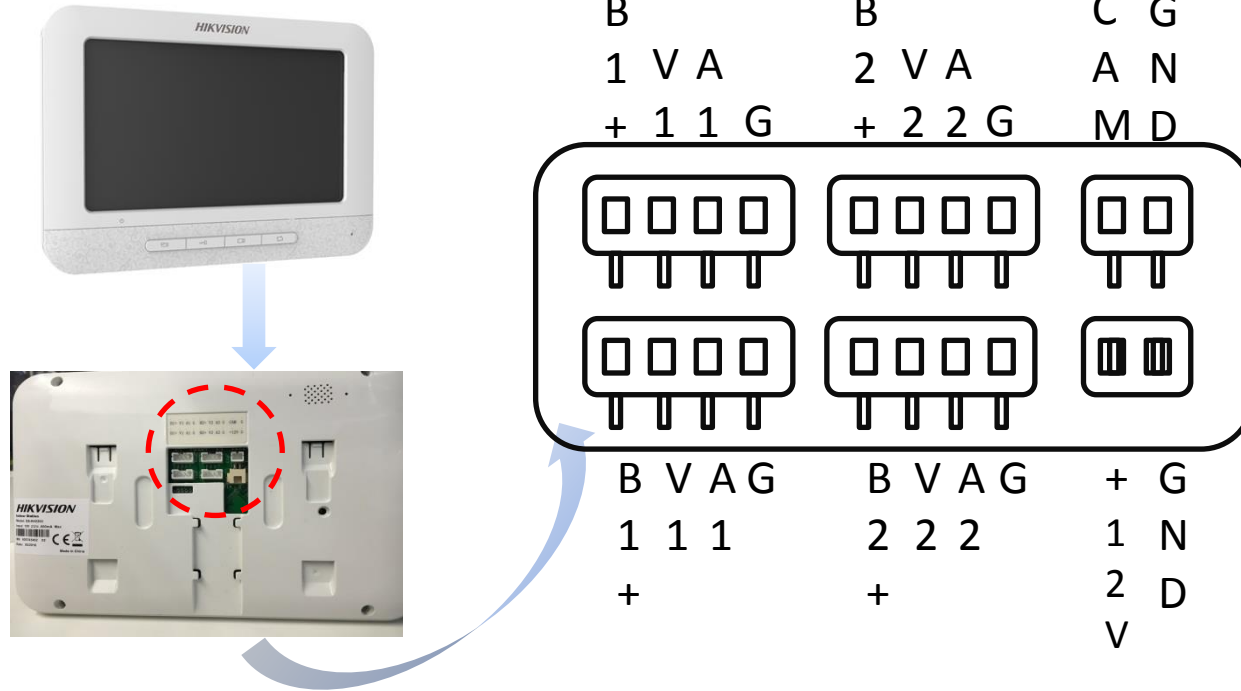

New Products -- Interface

Indoor station interface

HIKVISION

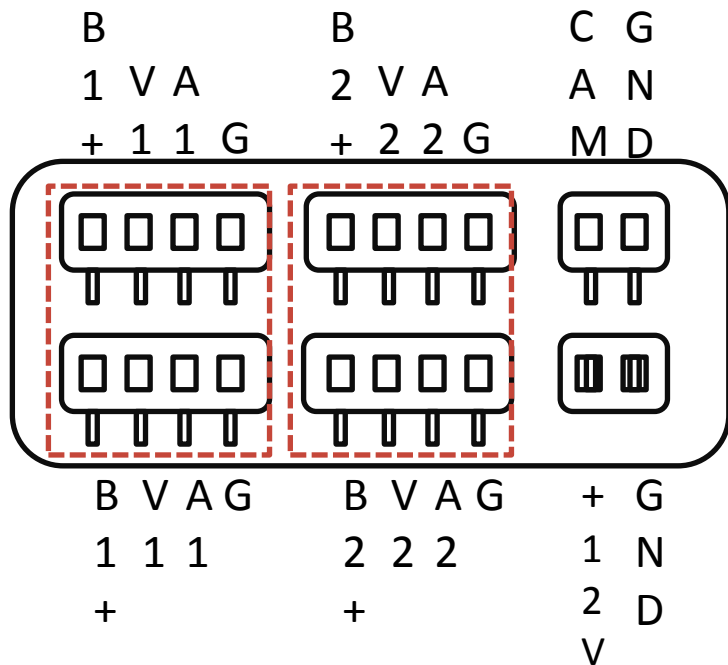

Description

- B1+/B2+: Power Supply for door station
- V1+/V2+: Video Input
- A1+/A2+: Audio Input
- G: Grounding Singal
- CAM: Analog Camera Access

NOTE: when connecting analog camera to indoor station, block to BNC cable need to be added into the BOM package.




15 cm Block to BNC
Cable x1

New Products -- Interface

Door station interface


HIKVISION

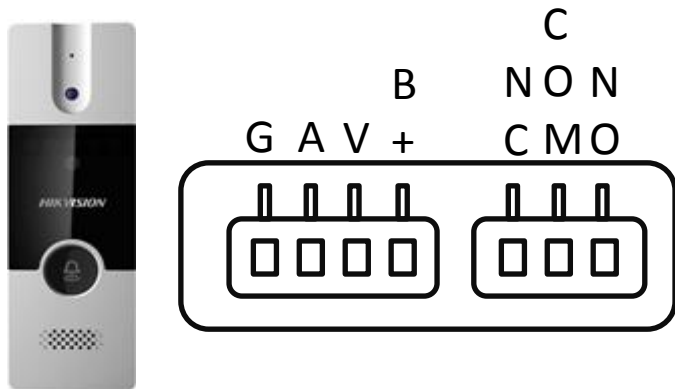

Description

- B+: Power Supply from door station
- V: Video Output
- A: Audio Input / Output
- G/COM: Grounding Singal
- NC: Door lock relay output(elextic bolt/Magnetic lok)
- NO: Door lock relay output(elextic strike)

First Choice for Security Professionals

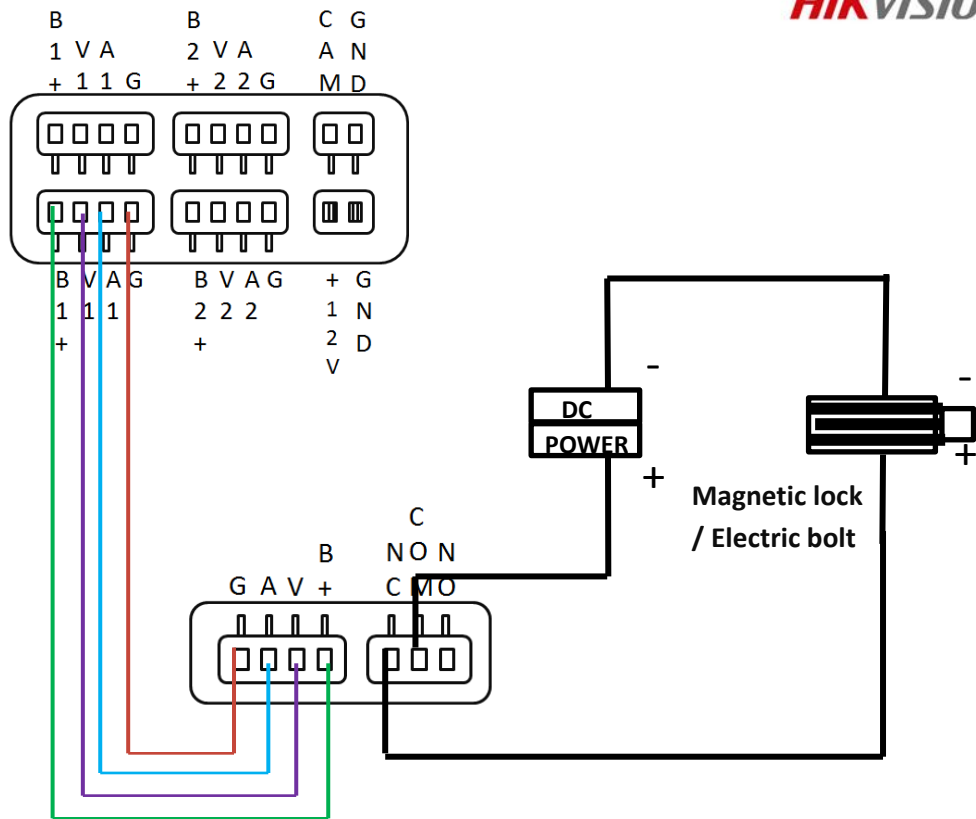


NOTE: 5cm three-core cable is included in BOM package,



New Products -- Wiring

1 door station and 1 indoor station

Connect electric strike and power supply for lock independently

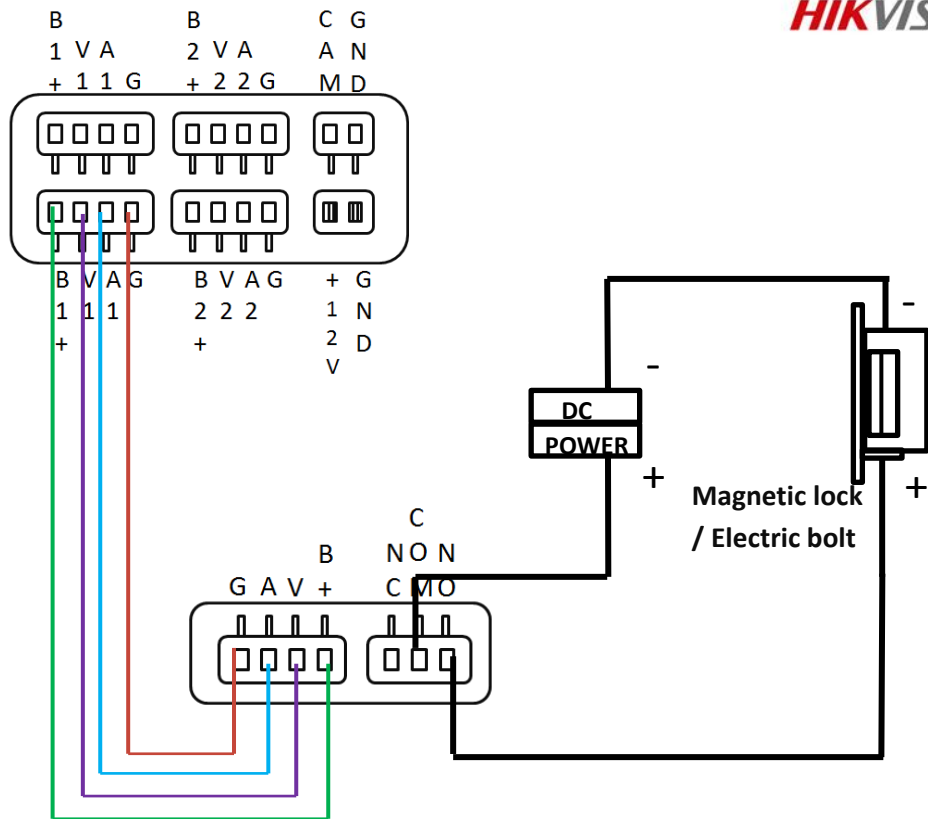


NOTE: 5cm three-core cable is included in BOM package,



New Products -- Wiring

1 door station and 1 indoor station


HIKVISION

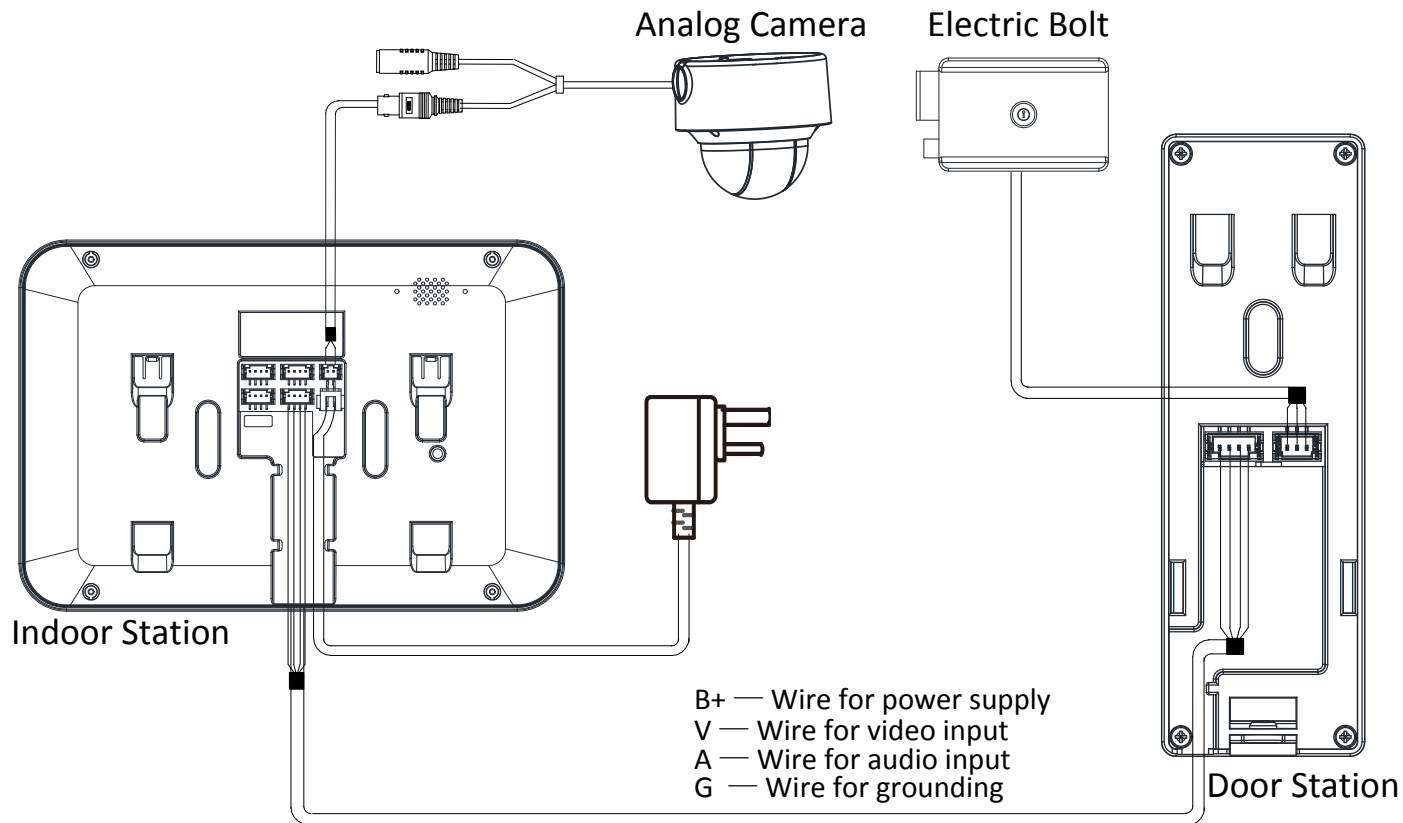

New Products -- Wiring

1 door station and 3 indoor station

When a house and an apartment with more than one indoor station, 2 or 3 indoor stations, wiring just like the picture shows:

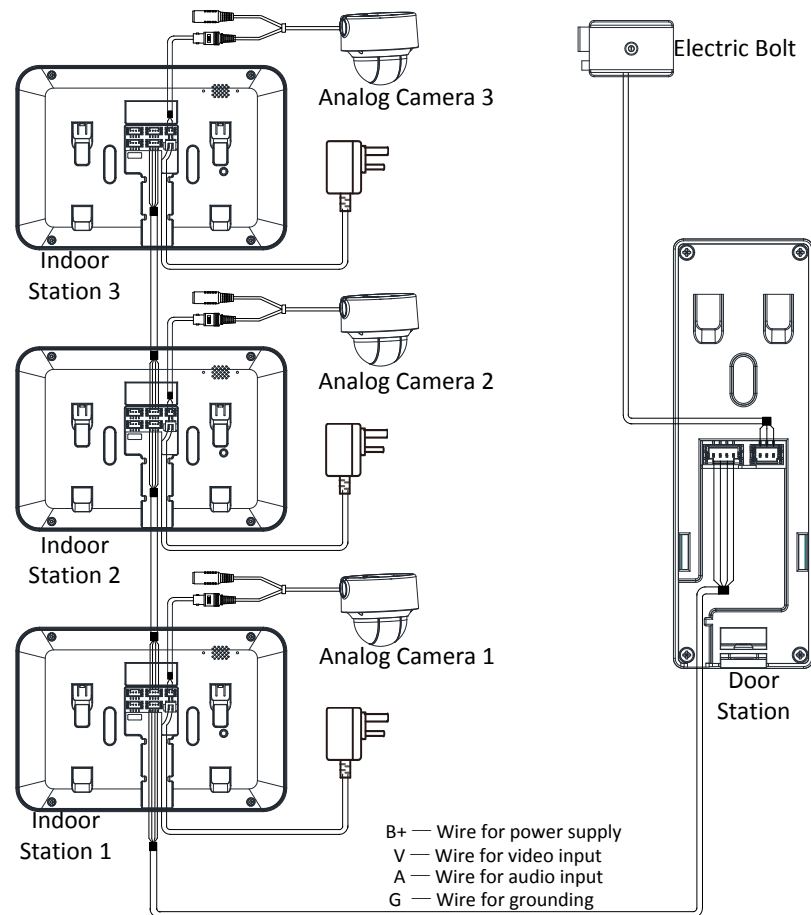


HIKVISION

New Products -- Wiring

2 door station and 3 indoor station


When a house with more than one indoor station, 2 or 3 indoor stations, and 2 entrances, wiring just like the picture shows:

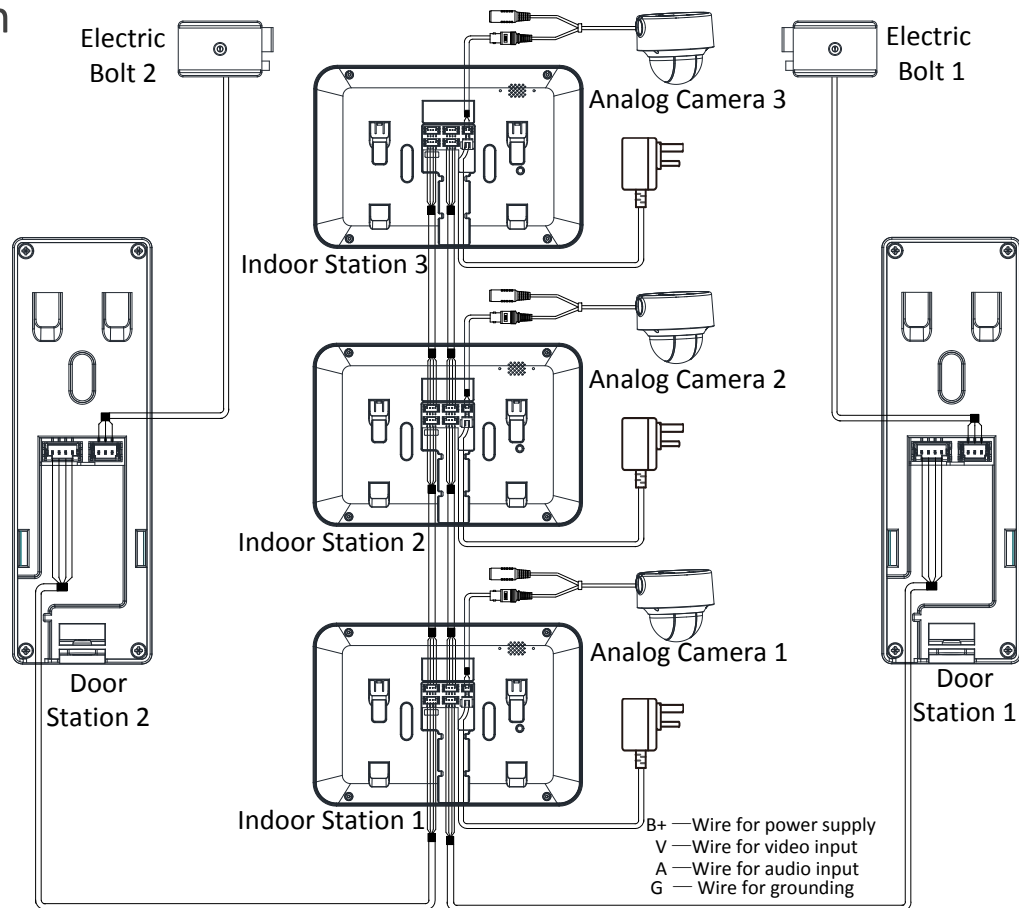

New Products -- Wiring

HIKVISION

BAD EXAMPLE

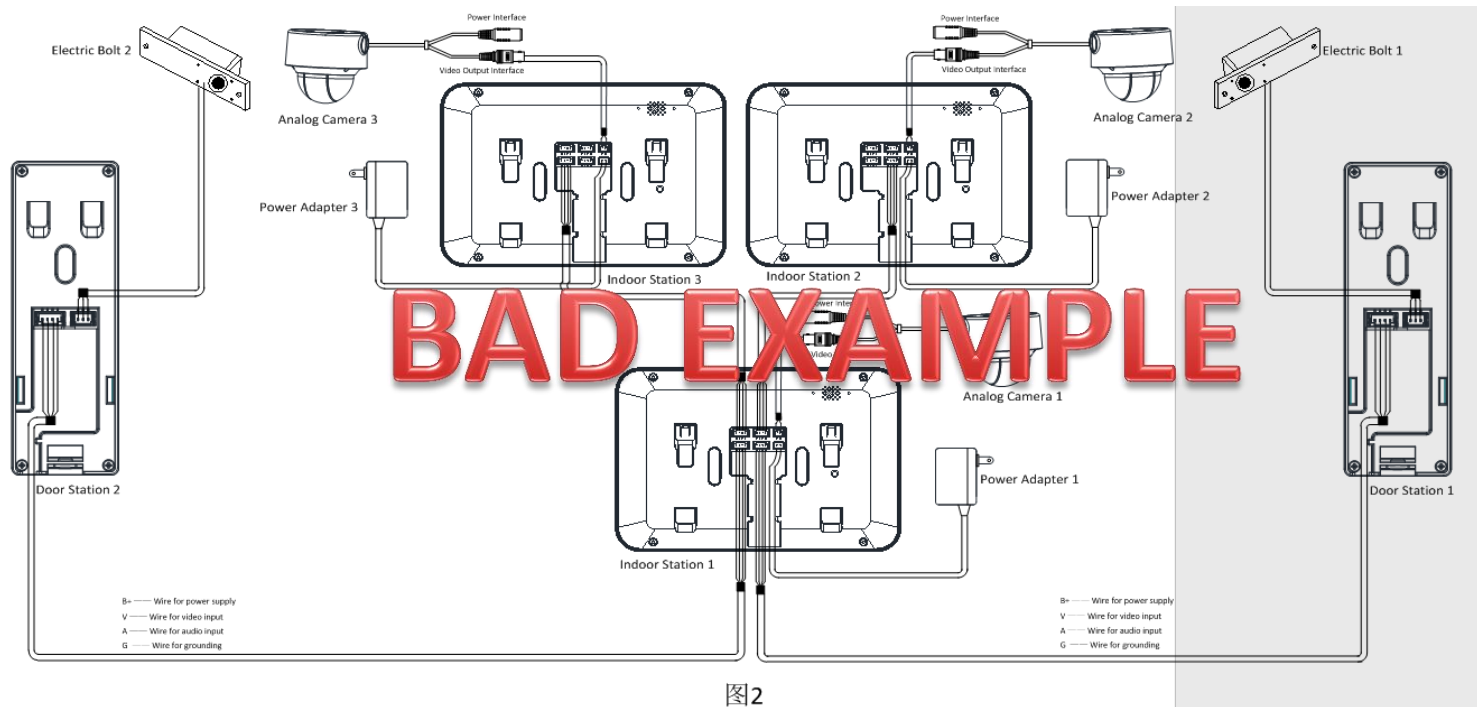

- 
- Application
 - Products
 - Installation
 - **OPERATION**

OPERATION

HIKVISION

How to realize video call

FIRST: Press * and # for Several seconds simultaneously until see 'Please input admin password and end with #', please input 888999 by default

SECOND: enter Network Configuration interface, set network parameters, please note that SIP IP and master IP is the master station's IP, center IP is platform software 's IP

THIRD: enter Local Settings interface, set parameters, please note than you need set 0 as serial No. , if your device is main door station; you need set 1-8 as serial No., if your device is sub-door station.

Please input admin password and end with #.

Network Configuration

Cancel : * Confirm : #

IP Address: 192. 0 . 0 .203
Sub Mask: 255.255.255. 0
Gateway: 10 . 16 . 38 .254
SIP: 0 . 0 . 0 . 0
Master IP: 0 . 0 . 0 . 0
Center IP: 0 . 0 . 0 . 0

Local Settings

Cancel : * Confirm : #

Project No.	1
Community No.	1
Building No.	1
Floor No.	1
Serial No.	0

OPERATION

How to realize video call


FOURTH: click 'Settings' --- 'Configuration', Input admin password (888999 by default); set 'Room No.' and enable 'Auto-Login' (Local Info interface); set IP address for indoor station(network interface);

FIFTH: add door station to indoor station, click 'Main Door Station' and select D Series OR V Series and input door station's IP;

NOTE: D Series means door station, v Series means villa door station;



Input the room No. to call indoor station

HIKVISION

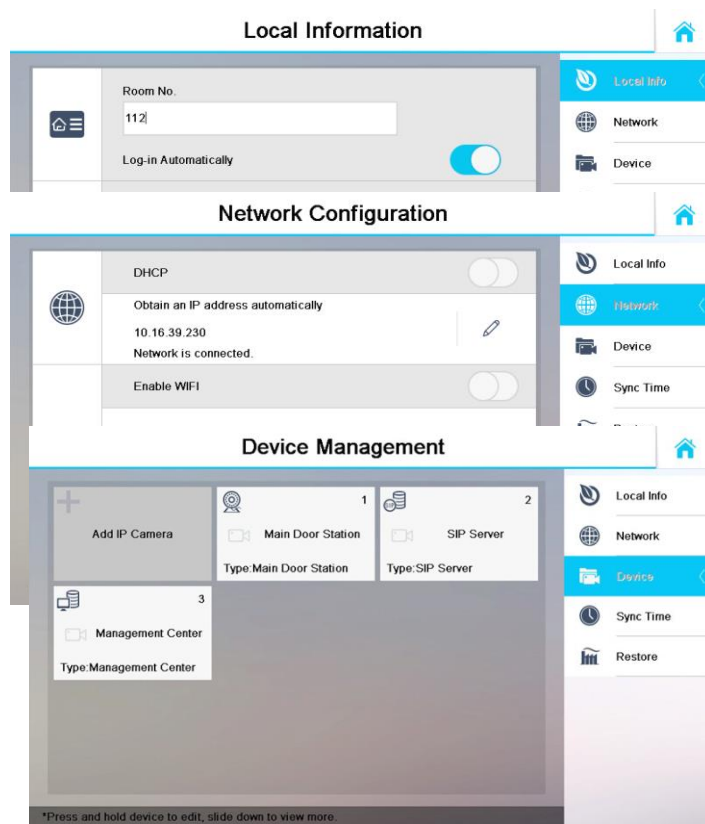



Indoor Station – Extension

Indoor Extension and door station at the same LAN (Local Area Network)

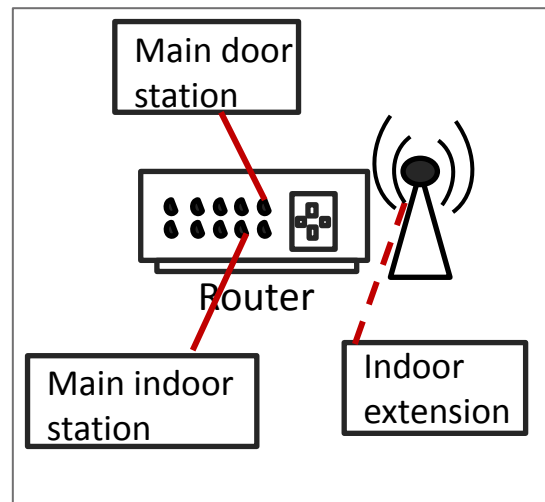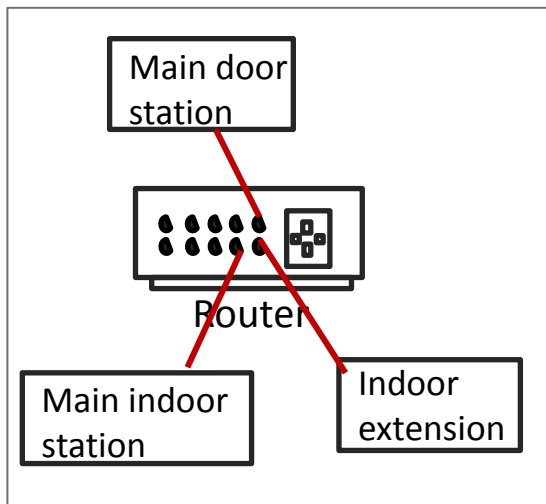

Indoor Station – Extension



Indoor Extension and door station at the same LAN (Local Area Network)

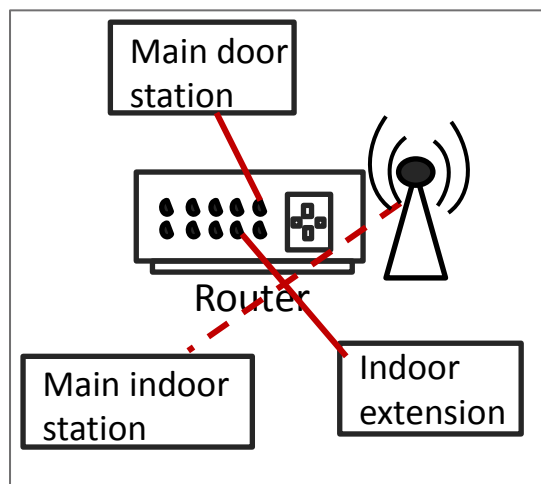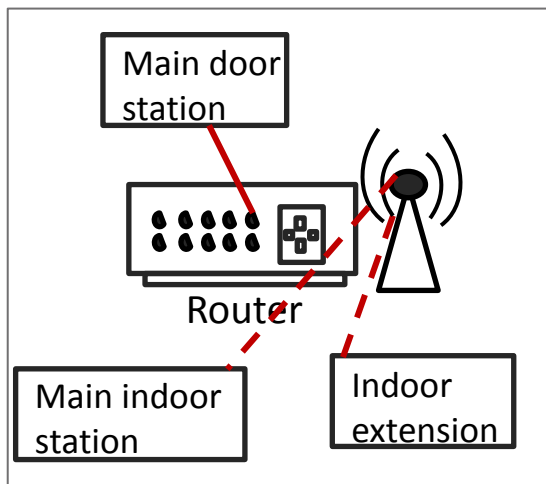

OPERATION

Indoor Station – Extension

Indoor Extension and door station at the different LAN (Local Area Network)

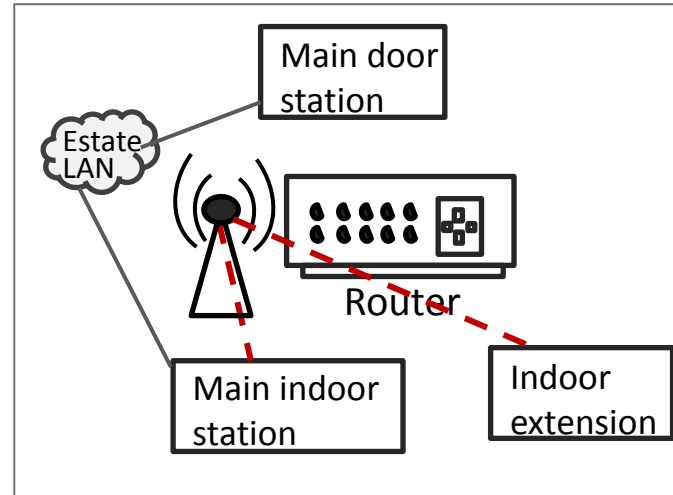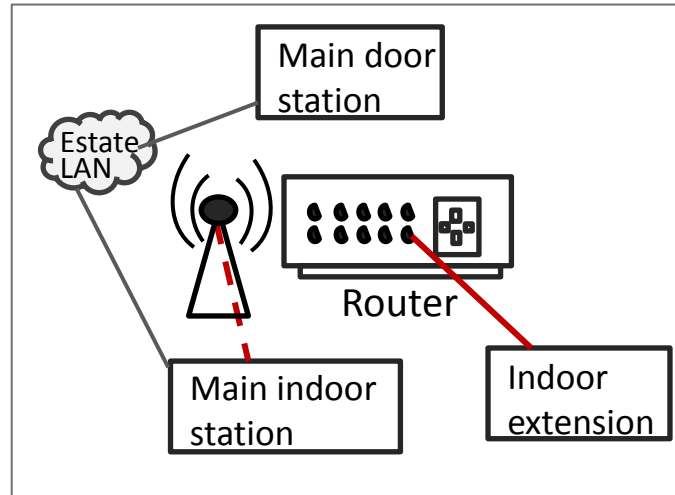




OPERATION

Indoor Station – Extension


Indoor Extension:

- set Indoor Extension
- set Room name and No.
- set IP address and configure Same LAN
- Add Indoor Station IP Address to extension

NOTE: Same LAN should be kept consistence in indoor station and indoor extension

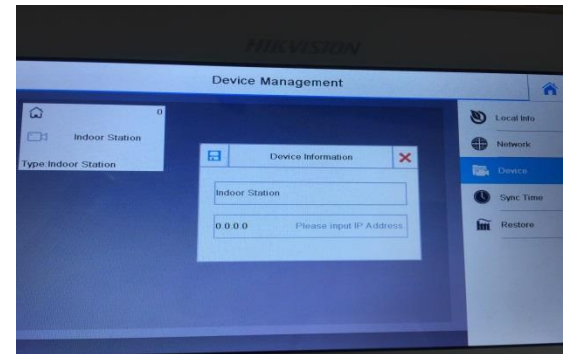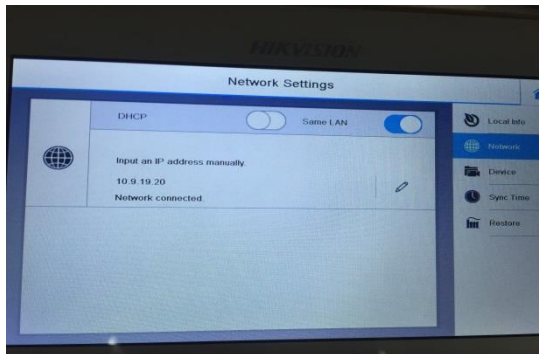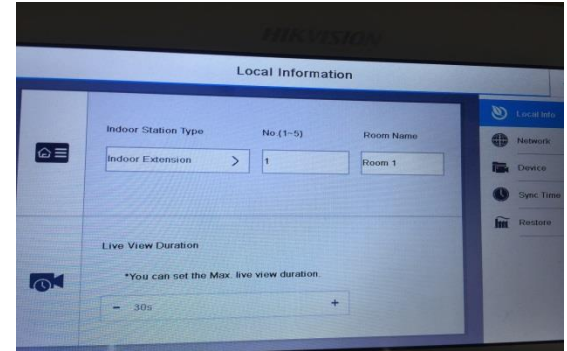

Indoor Station – Extension

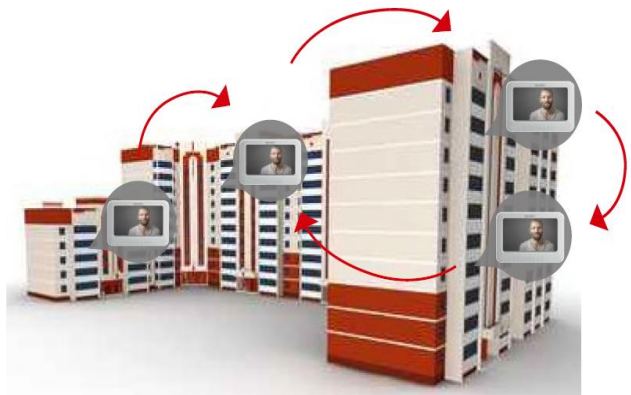

Indoor Extension:




- Same LAN should be kept consistence in indoor station and indoor extension
- Same LAN: indoor station and indoor extension receive call from other device at the same time
 - > both stations get stream from other device directly
 - > Signaling of both station is transmitted by indoor station
- Different LAN: indoor station and indoor extension receive call from other device at the same time
 - > indoor station gets stream from other device directly
 - > indoor extension gets stream from other device via router
 - > Signaling of both station is transmitted by indoor station

OPERATION

Door Station – Issue Card

Enter issue card interface

- Swipe main card
- Swipe sub card

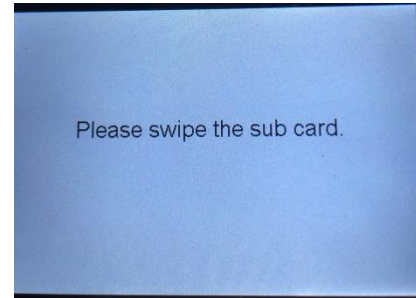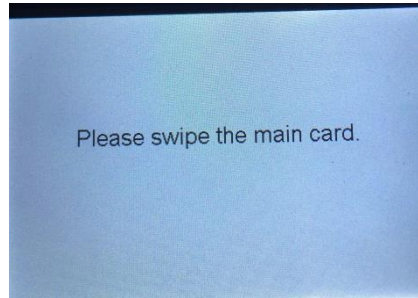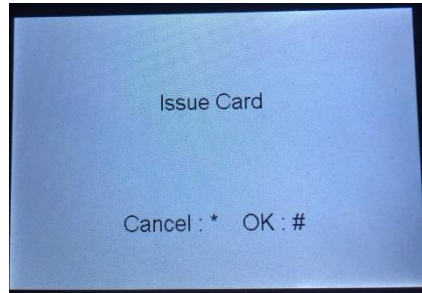

OPERATION


iVMS-4200 Client



Encoding Device/Door Station: 16
Indoor Station/Master Station: 512

FUNCTION:

- Call Indoor Station
- Receive Indoor/Door/Outer Door Station's Call
- Manage Community
- Issuing Card
- Notice Management
- Alarm Information
- Remote Configuration

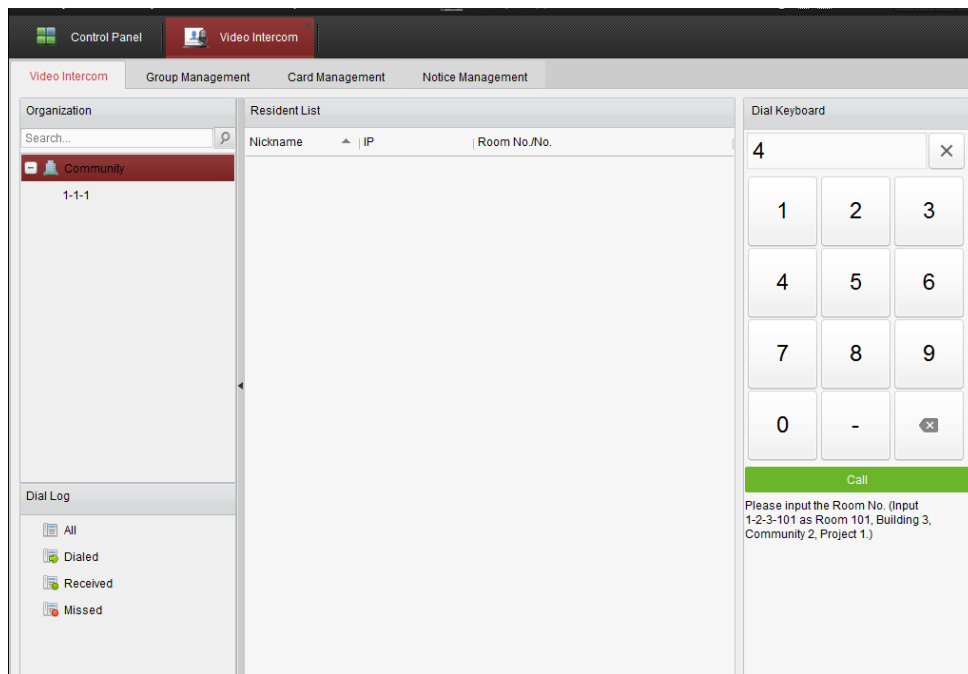

OPERATION


iVMS-4200 Client



Setting Community Structure & Others:

Others is used for Security personnel/Cleaning Workers and others

Adding device to Community, input the Room No.(Indoor station) or Serial No. (Door Station);

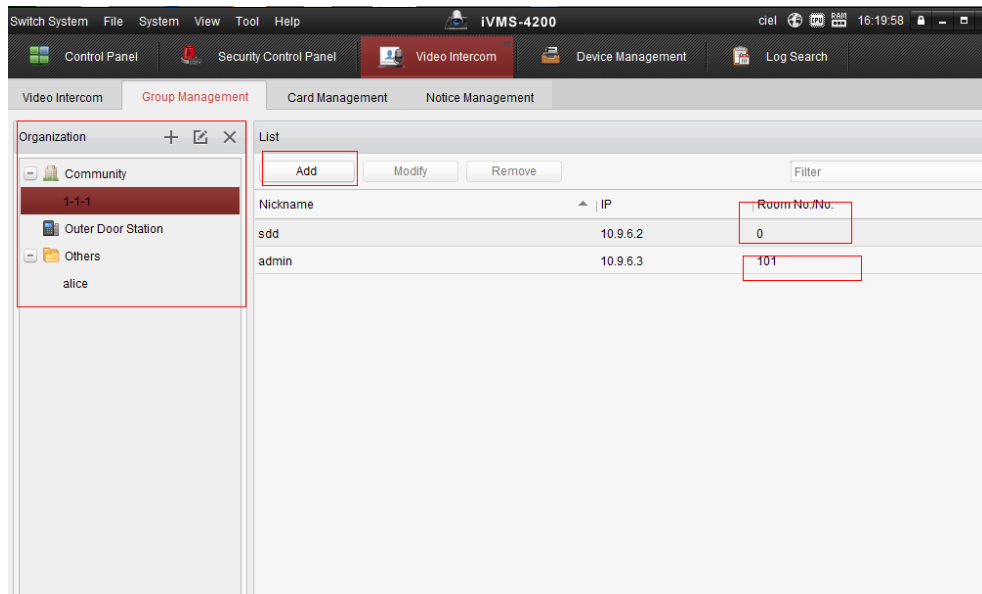

OPERATION

iVMS-4200 Client



Add Card: In Batch & Single Card & Card Reader.

Delete Card: Delete empty card, not normal card(which have issued to residents and others)

Issue Card: Select Indoor Station and Card and Door station.

OutCard: Return Residents Card and Other Card, select door station and cancel cards

The screenshot illustrates the 'Issue Card' process in the iVMS-4200 Client. The main interface shows the 'Card Management' section with the 'Unauthorized Card' tab selected. The 'Issue Card' button is highlighted. A 'Resident List' window is open, showing a table with columns for Index, Room No., IP Address, and Card. The 'OutCard' button is highlighted. A 'Card Selection' window is open, showing a table with columns for Index, Card No., Card Type, and Card Status. The 'Card Selection' window also has a 'Filter' field and a 'Device Selection' section with 'All' and 'sdd' options.

Index	Room No.	IP Address	Card
1	101	10.9.6.3	1/2/3/4/6

Index	Card No.	Card Type	Card Status
<input checked="" type="checkbox"/> 1	1	Resident Card	Normal Card
<input checked="" type="checkbox"/> 2	2	Resident Card	Normal Card
<input checked="" type="checkbox"/> 3	3	Resident Card	Normal Card
<input checked="" type="checkbox"/> 4	4	Resident Card	Normal Card
<input checked="" type="checkbox"/> 5	6	Resident Card	Normal Card
<input type="checkbox"/> 6	11	Resident Card	Unauthorized Card
<input type="checkbox"/> 7	12	Resident Card	Unauthorized Card
<input type="checkbox"/> 8	13	Resident Card	Unauthorized Card
<input type="checkbox"/> 9	14	Resident Card	Unauthorized Card
<input type="checkbox"/> 10	15	Resident Card	Unauthorized Card
<input type="checkbox"/> 11	16	Resident Card	Unauthorized Card

OPERATION



iVMS-4200 Client


Notice Management:

Send message to indoor station, including advertising information/property information/notice information/alarm information

Subject: no more than 63 letters (including space);

Information: no more than 1023 letters(including space);

Picture: less than 512KB and jpg. Format, and no more than 6 pictures can be added to the same notice information;

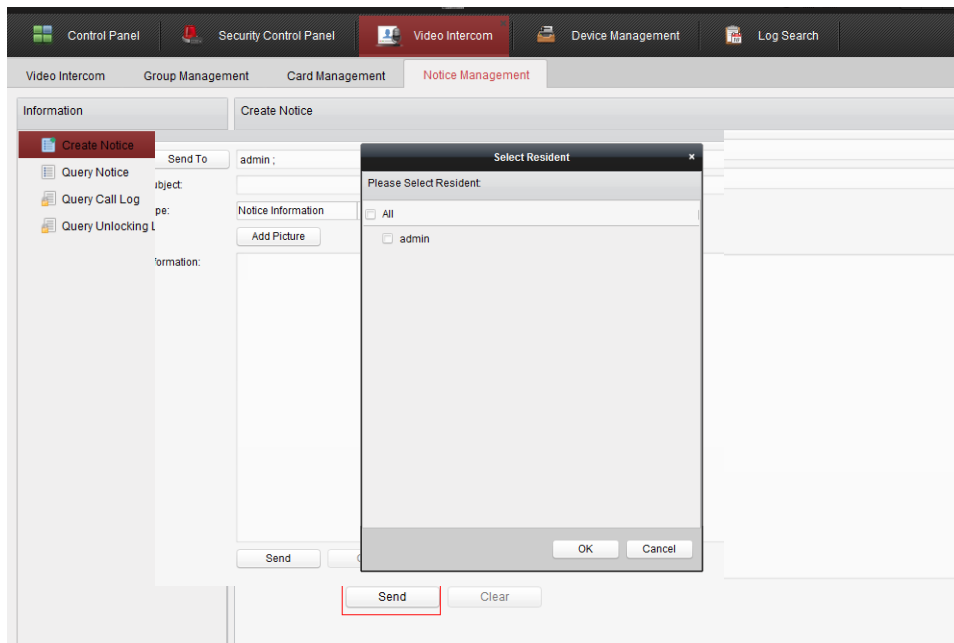

OPERATION

iVMS-4200 Client




Query Notice:

Reset: reset start time and end time;

Click  to check the notice details;

Query Call Log:

Query Unlocking Log:

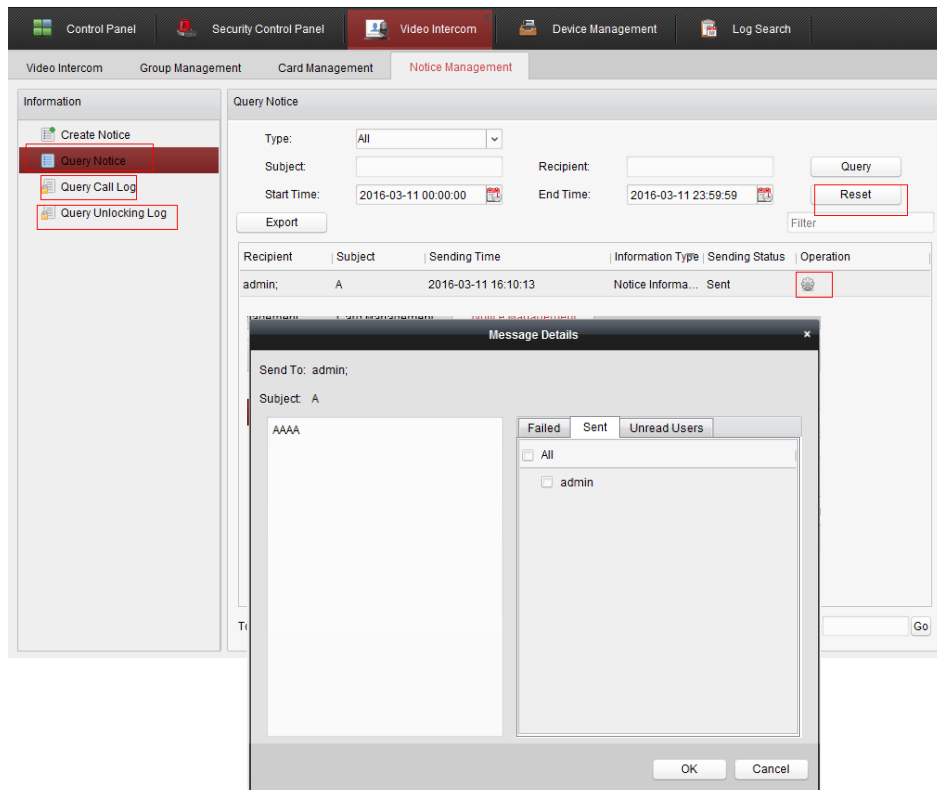

OPERATION

Batch Configuration Tool



FUNCTION:

- Activate Device & Reset Password
- Edit NET Parameters
- Remote Configuration

Index	Device Type	IP Address	Port	Software Version	Serial No.	Configuration Status	Configuration
1	DS-KD8102-2	10.8.13.27	8000	V1.0.0 build 141223	DS-KD8102-20120140917AA...		
2	DS-KM8301	10.8.13.40	8000	V1.0.0 build 141223	DS-KM83010120141215AAC...		
3	DS-KH8301-A	10.7.32.16	8000	V1.0.0 build 141202	DS-KH8301-A0120140925AA...		
4	DS-KD8102-2	10.7.32.53	8000	V1.0.0 build 141021	DS-KD8102-20120140925AA...		
5	DS-KH8301-A	10.16.1.25	8000	V1.0.0 build 141204	DS-KH8301-A0120141128AA...		
6	DS-2DF7286-A	10.16.1.223	8000	V5.3.0 build 141230	DS-2DF7286-A20141110CC...		
7	TRAFFIC_TS_SERV...	10.16.1.92	8000	V4.0.5 build 140611	TS-5012-F 0120140709BBR...		
8	DS-7604HI-ST	10.16.1.19	8000	V2.3.4 build 130708	DS-7604HI-ST0820130708B...		
9	DS-TCP125	10.16.1.224	8000	V5.1.2 build 141117	DS-TCP12520141218ACCH...		
10	DS-KD8102-2	10.16.1.65	8000	V1.0.0 build 141127	DS-KD8102-20120141114AA...		

Index	Device Type	IP Address	Port	Software Version	Serial No.	Added
1	DS-KH8301-A	10.16.1.25	8000	V1.0.0 build 141204	DS-KH8301-A0120141128AAC...	Yes
2	DS-7604HI-ST	10.16.1.19	8000	V2.3.4 build 130708	DS-7604HI-ST0820130708B...	Yes
3	DS-2DF7286-A	10.16.1.223	8000	V5.3.0 build 141230	DS-2DF7286-A20141110CCW...	Yes

OPERATION




Batch Upgrading

Door Station/Villa Door Station/
Indoor Station/Master Station: ≤ 256

FUNCTION:

- Online Device – Login Device – Add Device
- Manual (BY IP or IP Segment)
- Batch Upgrading

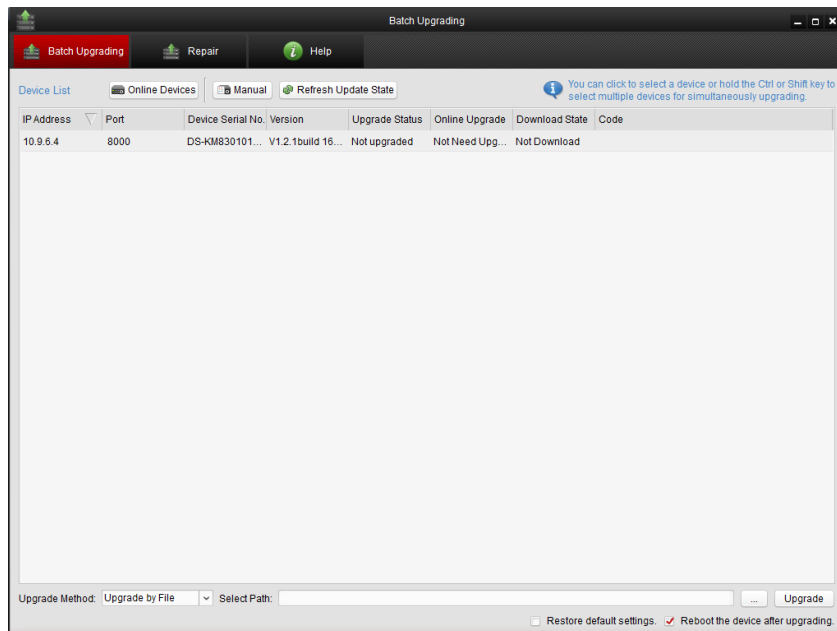

Thanks

Hikvision Digital Technology Co., Ltd.

No.555 Qianmo Road, Binjiang District

Hangzhou 310052, China

T +86 571 88075998

F +86 571 89935635

overseasbusiness@hikvision.com

www.hikvision.com