

To enter the user menu enter the user code: **1 2 3 4** (default code)
'[600] CALL TELEPHONE NUMBER' will be displayed indicating that the user menu has been entered.

- **Enter [800]: Play/Record Alarm Voice Messages**

You can add a voice message for each input you are using.

- **Enter [820]: Play/Record Common Message**

The common message you would like to be played with each message.

- **Enter [830]: Write SMS Alarm Messages**

- **Enter [900]: Program The Telephone Numbers**

- **Enter [930]: Message Type and Select**

[0] for Voice [1] Voice + Common [2] SMS

- **Enter [999]: Exit the User Menu**



To enter the engineer menu enter the engineer code: **[9][9][9][9]** (default code) '[100] PLAY/REC VOICE SYSTEMS MESSAGES' will be displayed indicating that the engineer menu has been entered.

- Enter [200]: Telephone Number Input Allocation

This option will allocate the inputs to phone numbers that were programmed in the user menu function [900].

- Enter [350]: Auto Learn Input Status 1-6

The V2 GSM will learn automatically the status of the PGMs.

- Enter [580]: Enable Abort Input #6

This option enables the ability to abort a call (useful for false alarms)

- Enter [581]: Enable Status Input #5

This option enables the ability to obtain the control panel status

- Enter [608]: Sim Telephone Number

This adds the phone number of the SIM card that is used and will automatically set the time according to the GSM network.

- Enter [612]: Forward Low Credit SMS

This is when the SIM card network sends a warning call of low credit to the chosen telephone number (1-9).

- Enter [999]: Exit the Engineer menu

RINS1379-3



To enter the engineer menu enter the engineer code: **[9][9][9][9]** (default code) '[100] PLAY/REC VOICE SYSTEMS MESSAGES' will be displayed indicating that the engineer menu has been entered.

- Enter [200]: Telephone Number Input Allocation

This option will allocate the inputs to phone numbers that were programmed in the user menu function [900].

- Enter [350]: Auto Learn Input Status 1-6

The V2 GSM will learn automatically the status of the PGMs.

- Enter [580]: Enable Abort Input #6

This option enables the ability to abort a call (useful for false alarms)

- Enter [581]: Enable Status Input #5

This option enables the ability to obtain the control panel status

- Enter [608]: Sim Telephone Number

This adds the phone number of the SIM card that is used and will automatically set the time according to the GSM network.

- Enter [612]: Forward Low Credit SMS

This is when the SIM card network sends a warning call of low credit to the chosen telephone number (1-9).

- Enter [999]: Exit the Engineer menu

RINS1379-3



To enter the engineer menu enter the engineer code: **[9][9][9][9]** (default code) '[100] PLAY/REC VOICE SYSTEMS MESSAGES' will be displayed indicating that the engineer menu has been entered.

- Enter [200]: Telephone Number Input Allocation

This option will allocate the inputs to phone numbers that were programmed in the user menu function [900].

- Enter [350]: Auto Learn Input Status 1-6

The V2 GSM will learn automatically the status of the PGMs.

- Enter [580]: Enable Abort Input #6

This option enables the ability to abort a call (useful for false alarms)

- Enter [581]: Enable Status Input #5

This option enables the ability to obtain the control panel status

- Enter [608]: Sim Telephone Number

This adds the phone number of the SIM card that is used and will automatically set the time according to the GSM network.

- Enter [612]: Forward Low Credit SMS

This is when the SIM card network sends a warning call of low credit to the chosen telephone number (1-9).

- Enter [999]: Exit the Engineer menu

RINS1379-3



To enter the engineer menu enter the engineer code: **[9][9][9][9]** (default code) '[100] PLAY/REC VOICE SYSTEMS MESSAGES' will be displayed indicating that the engineer menu has been entered.

- Enter [200]: Telephone Number Input Allocation

This option will allocate the inputs to phone numbers that were programmed in the user menu function [900].

- Enter [350]: Auto Learn Input Status 1-6

The V2 GSM will learn automatically the status of the PGMs.

- Enter [580]: Enable Abort Input #6

This option enables the ability to abort a call (useful for false alarms)

- Enter [581]: Enable Status Input #5

This option enables the ability to obtain the control panel status

- Enter [608]: Sim Telephone Number

This adds the phone number of the SIM card that is used and will automatically set the time according to the GSM network.

- Enter [612]: Forward Low Credit SMS

This is when the SIM card network sends a warning call of low credit to the chosen telephone number (1-9).

- Enter [999]: Exit the Engineer menu

RINS1379-3