TIMEGUARD[®]

LED Wide Beam Floodlight





Model: LEDX10FLBN (Black) Model: LEDX10FLWHN (White)

Model: LEDX20FLBN (Black) Model: LEDX20FLWHN (White)



Model: LEDX30FLBN (Black)
Model: LEDX30FLWHN (White)

1. General Information

These instructions should be read carefully and retained for further reference and maintenance.

2. Safety

- Before installation or maintenance, ensure the mains supply to the luminaire is switched off and the circuit supply fuses are removed or the circuit breaker turned off.
- It is recommended that a qualified electrician is consulted or used for the installation of this luminaire and install in accordance with the current IEE wiring and Building Regulations.
- Check that the total load on the circuit including when this luminaire is fitted does not exceed the rating of the circuit cable, fuse or circuit breaker.

3. Technical Specifications

- 230V AC, 50Hz
- These luminaires are of class I construction and must be earthed

Colour Temperature: 4000KEnergy Efficiency: Class E

- IP55 Rated suitable for restricted external applications
- CE Compliant

LEDX10FLBN-WHN

• 10W LED Non replaceable lamp

• Energy Usage: 12Kwh/1000h

• Lumen Output: 1000lm

LEDX20FLBN-WHN

• 20W LED Non replaceable lamp

Energy Usage: 21Kwh/1000hLumen Output: 2000lm

LEDX30FLBN-WHN

• 30W LED Non replaceable lamp


Energy Usage: 32Kwh/1000hLumen Output: 3000lm

4. Installation

4.1 Mark the position of the mounting holes on the wall using the U bracket supplied as a template.




4.2 Drill the holes for the wall plugs ensuring not to infringe with any gas/water pipes or electrical cables that may be hidden below the surface.

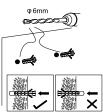


4.3 Fix the U bracket to the wall using the correct screws for the wall plugs installed.




4.4 Secure the supply cable into the junction box through the hole(s) provided ensuring that a cable gland, grommet or sealing compound is used to maintain the IP rating of the luminaire.

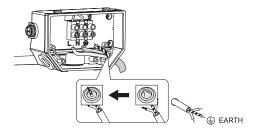

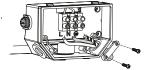


Srews: (M3 x 12mm) x 2

- 4.6 Terminate the supply cable into the terminal block (please refer to section 5 connection diagram) ensuring correct polarity is observed and that all bare conductors are sleeved.
- 4.7 Attach the supplied wall plate to the luminaire, apply pressure to catches located on top and bottom until all click into place to ensure the weatherproof seal.

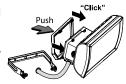


4.8 Attach the luminaire to the U bracket fitted to the wall, then screw in on both sides ensuring not to over-tighten.

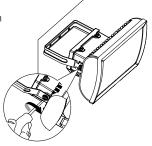

3

5. Connection Diagram

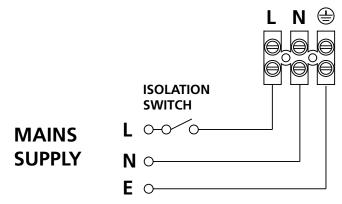

4


Connect the 3 core mains supply	cable to the block on the unit as follows:-	
LIVE (Brown or Red)	L	
NEUTRAL (Blue or Black)	N	
FARTH (Green/Yellow)	(4)	

6. Operation

• Turn the power on to the isolating switch and test for correct operation.

7. Lamp Adjustment

• The lamp can be tilted upwards 45° and tilted downwards 60°.

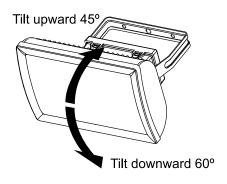

3 Year Guarantee

In the unlikely event of this product becoming faulty due to defective material or manufacture within 3 years of the date of purchase, please return it to your supplier in the first year with proof of purchase and it will be replaced free of charge. For years 2 and 3 or any difficulty in the first year, telephone the helpline on 020 8450 0515.

Note: A proof of purchase is required in all cases. For all eligible replacements (where agreed by Timeguard) the customer is responsible for all shipping/postage charges outside of the UK. All shipping costs are to be paid in advance before a replacement is sent.



If you experience problems, do not immediately return the unit to the store. Telephone the Timeguard Customer Helpline:

HELPLINE **020 8450 0515**

or email helpline@timeguard.com

Qualified Customer Support Coordinators will be online to assist in resolving your query.



Deta Electrical Co Ltd

Panattoni Park, Luton Road, Chalton, Bedfordshire, LU4 9TT Sales Office: 020 8452 1112 or email csc@timeguard.com

www.timeguard.com