

General

Our products are designed to comply with the recommended codes and practice, and is to be installed and serviced by competent persons in accordance with the relevant regulations.

Contents

- 1 x ECSPCAMPT
- 1 x Power Adapter
- 1 x USB Cable
- 1 x Bracket
- 1 x Adhesive Tape
- 1 x Set of installation screws
- 1 x Reset Pin
- 1 x User Manual

Preparation For Use

Ensure that the smart phone is connected to the same Wi-Fi network that you would like to attach the device.


Ensure that you have a mobile device running iOS 8 or higher or Android 4.1x or higher and a 2.4GHz Wi-Fi connection.



Download the ClickSmart+ App on your mobile device from the App Store or Google Play.


Sign in or Register following the instructions on the ClickSmart+ App.

Product Diagram

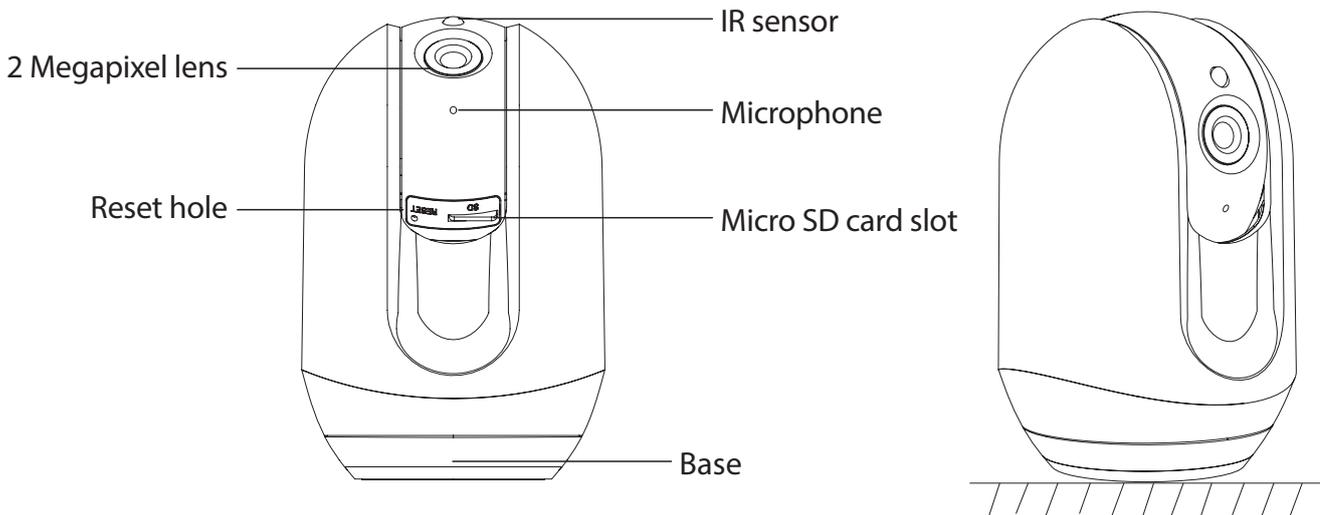

Installation

The indoor camera is designed for table top use or ceiling mount using the supplied bracket;

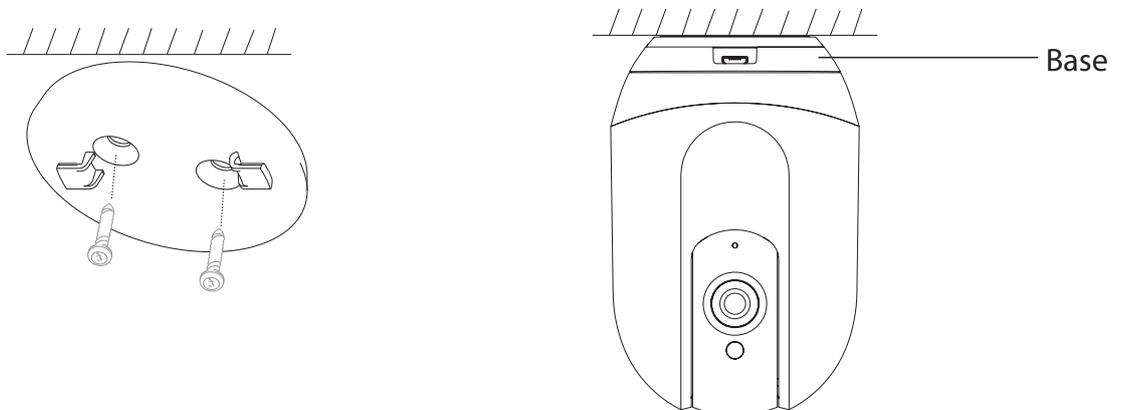


Connect the supplied power adapter to the camera and apply power, the camera will operate after 60secs.



APP Pairing

1. Set up the device as per the installation instructions.
2. Once powered, the unit should say "Camera start", followed by "Please configure network".
3. On the Clicksmart+ app, click on the add icon "+", then click "Smart PT Camera", and then follow the on screen instructions.

The ClickSmart+ app will guide you through:
 Entering the Wi-Fi Network and Password.
 Using the Camera to scan a QR code.
 Connecting the Device.

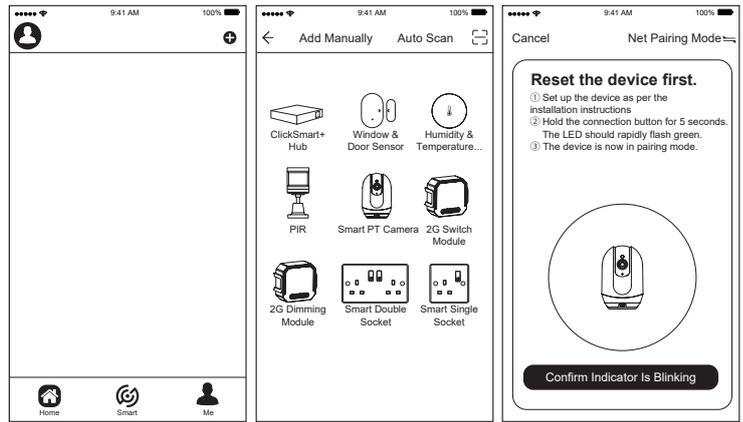


Resetting the Device

If the Camera needs to be reset, connected to a new Wi-Fi network, or if it needs to be paired with a new master account, remove the device from the app, prior to resetting the device.

Turn the Camera on, press the reset button in for 5 seconds, The camera will beep and say "restore factory setting".

The system settings will be restored to factory default.

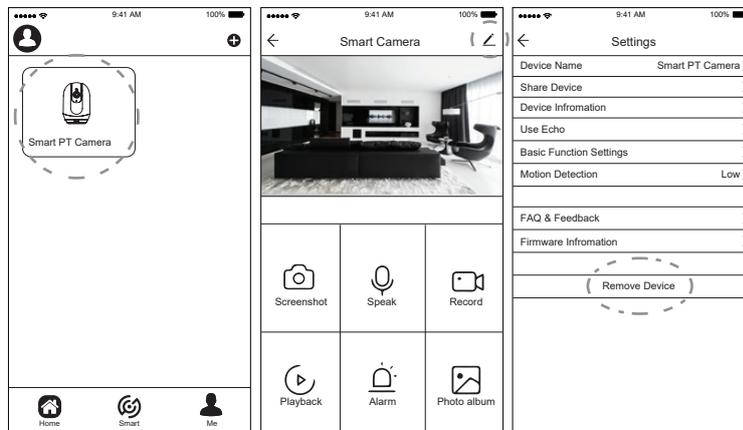

Guidance

- >Unit requires a minimum of 2 Mbps (upload/download)
- >If the signal strength of your Wi-Fi router is weak: Change router/camera relative position to receive better signal, Use Wi-Fi repeater/extender to maximize the range of your Wi-Fi router.
- >If the device is installed on a new network the unit will require resetting
- >If the camera needs to be added to a new account, unbind the device from the first account prior to resetting the device.

For more product information please visit the ESP website